


# User Manual

## IP Apartment Outdoor Station (IP Series)

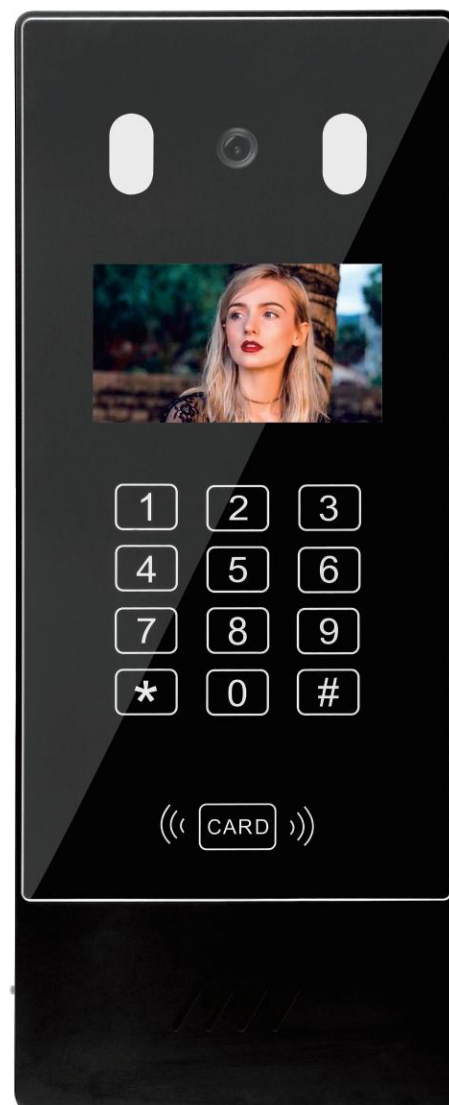

4.3 Inches




4.3 Inches

Before using this product, read the Quick Guide carefully and save it for future referenceV3.0.

# Front and Back Introduction


## 4.3 Inches Outdoor Station

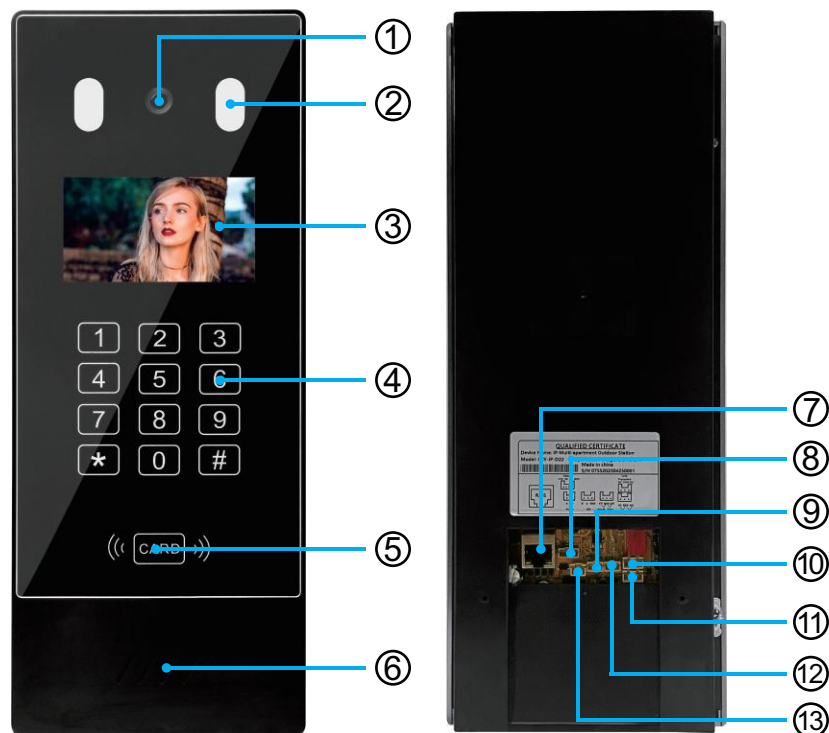

- ① Camera
- ② LED
- ③ 4.3-inch LCD Screen
- ④ Touch Buttons
- ⑤ Card Reading Area
- ⑥ Speaker
- ⑦ RJ45
- ⑧ Debug/VCC RX TX GND
- ⑨ 485/B A GND
- ⑩ NC COM NO
- ⑪ NC GND NO
- ⑫ CTL GND DET
- ⑬ Power/+ -


# Front and Back Introduction

## 4.3 Inches Outdoor Station

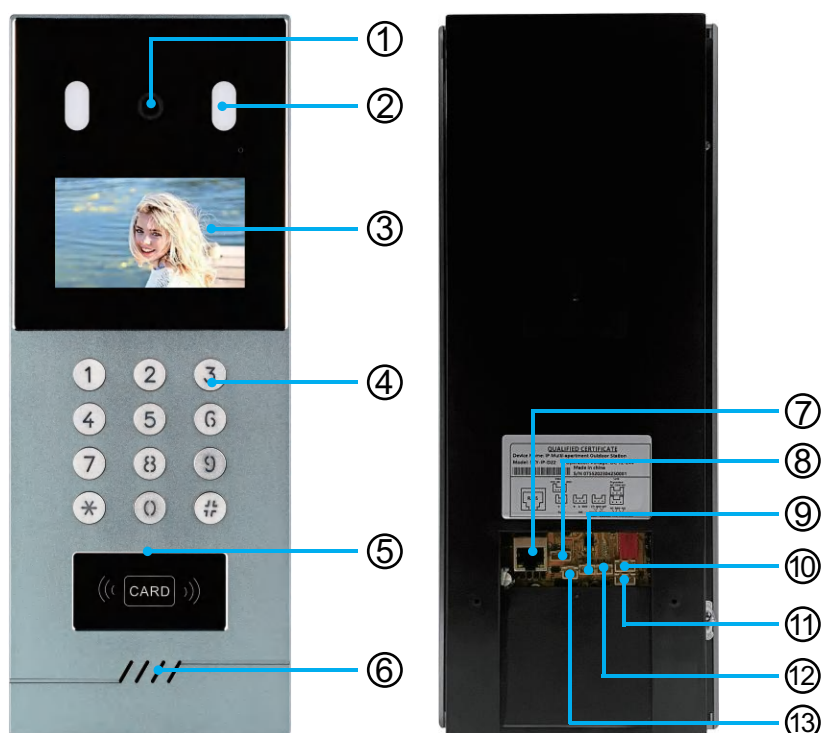


- ① Camera
- ② LED
- ③ 4.3-inch LCD Screen
- ④ Buttons
- ⑤ Card Reading Area
- ⑥ Speaker
- ⑦ RJ45
- ⑧ Debug/VCC RX TX GND
- ⑨ 485/B A GND
- ⑩ NC COM NO
- ⑪ NC GND NO
- ⑫ CTL GND DET
- ⑬ Power/+ -

# Outdoor Station Installation

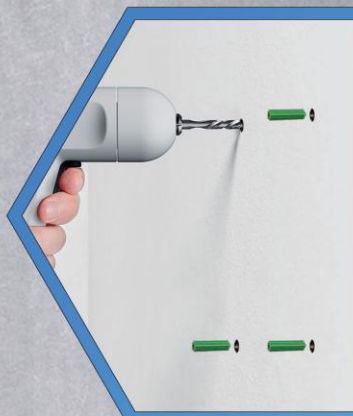

## Drilling

Drill screw holes at proper location for wall mounting plate.

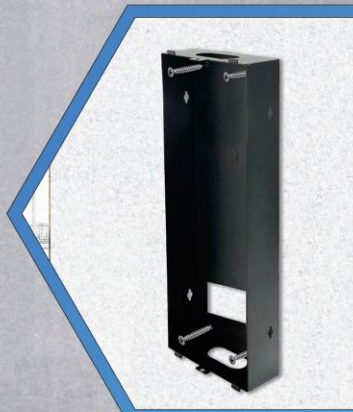

## Fix wall mounting plate


Fix the wall mounting plate to the wall with 4 screws.



## Install outdoor station

Insert the outdoor station to the plate and fix it with 2 screws

# Outdoor Station Installation

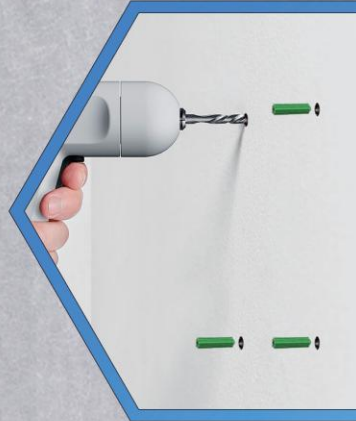

## Drilling

Drill screw holes at proper location for wall mounting plate.



## Fix wall mounting plate


Fix the wall mounting plate to the wall with 4 screws.




## Install outdoor station

Insert the outdoor station to the plate and fix it with 2 screws

# Wiring Diagram(1 to 1) (Ethernet Cable)

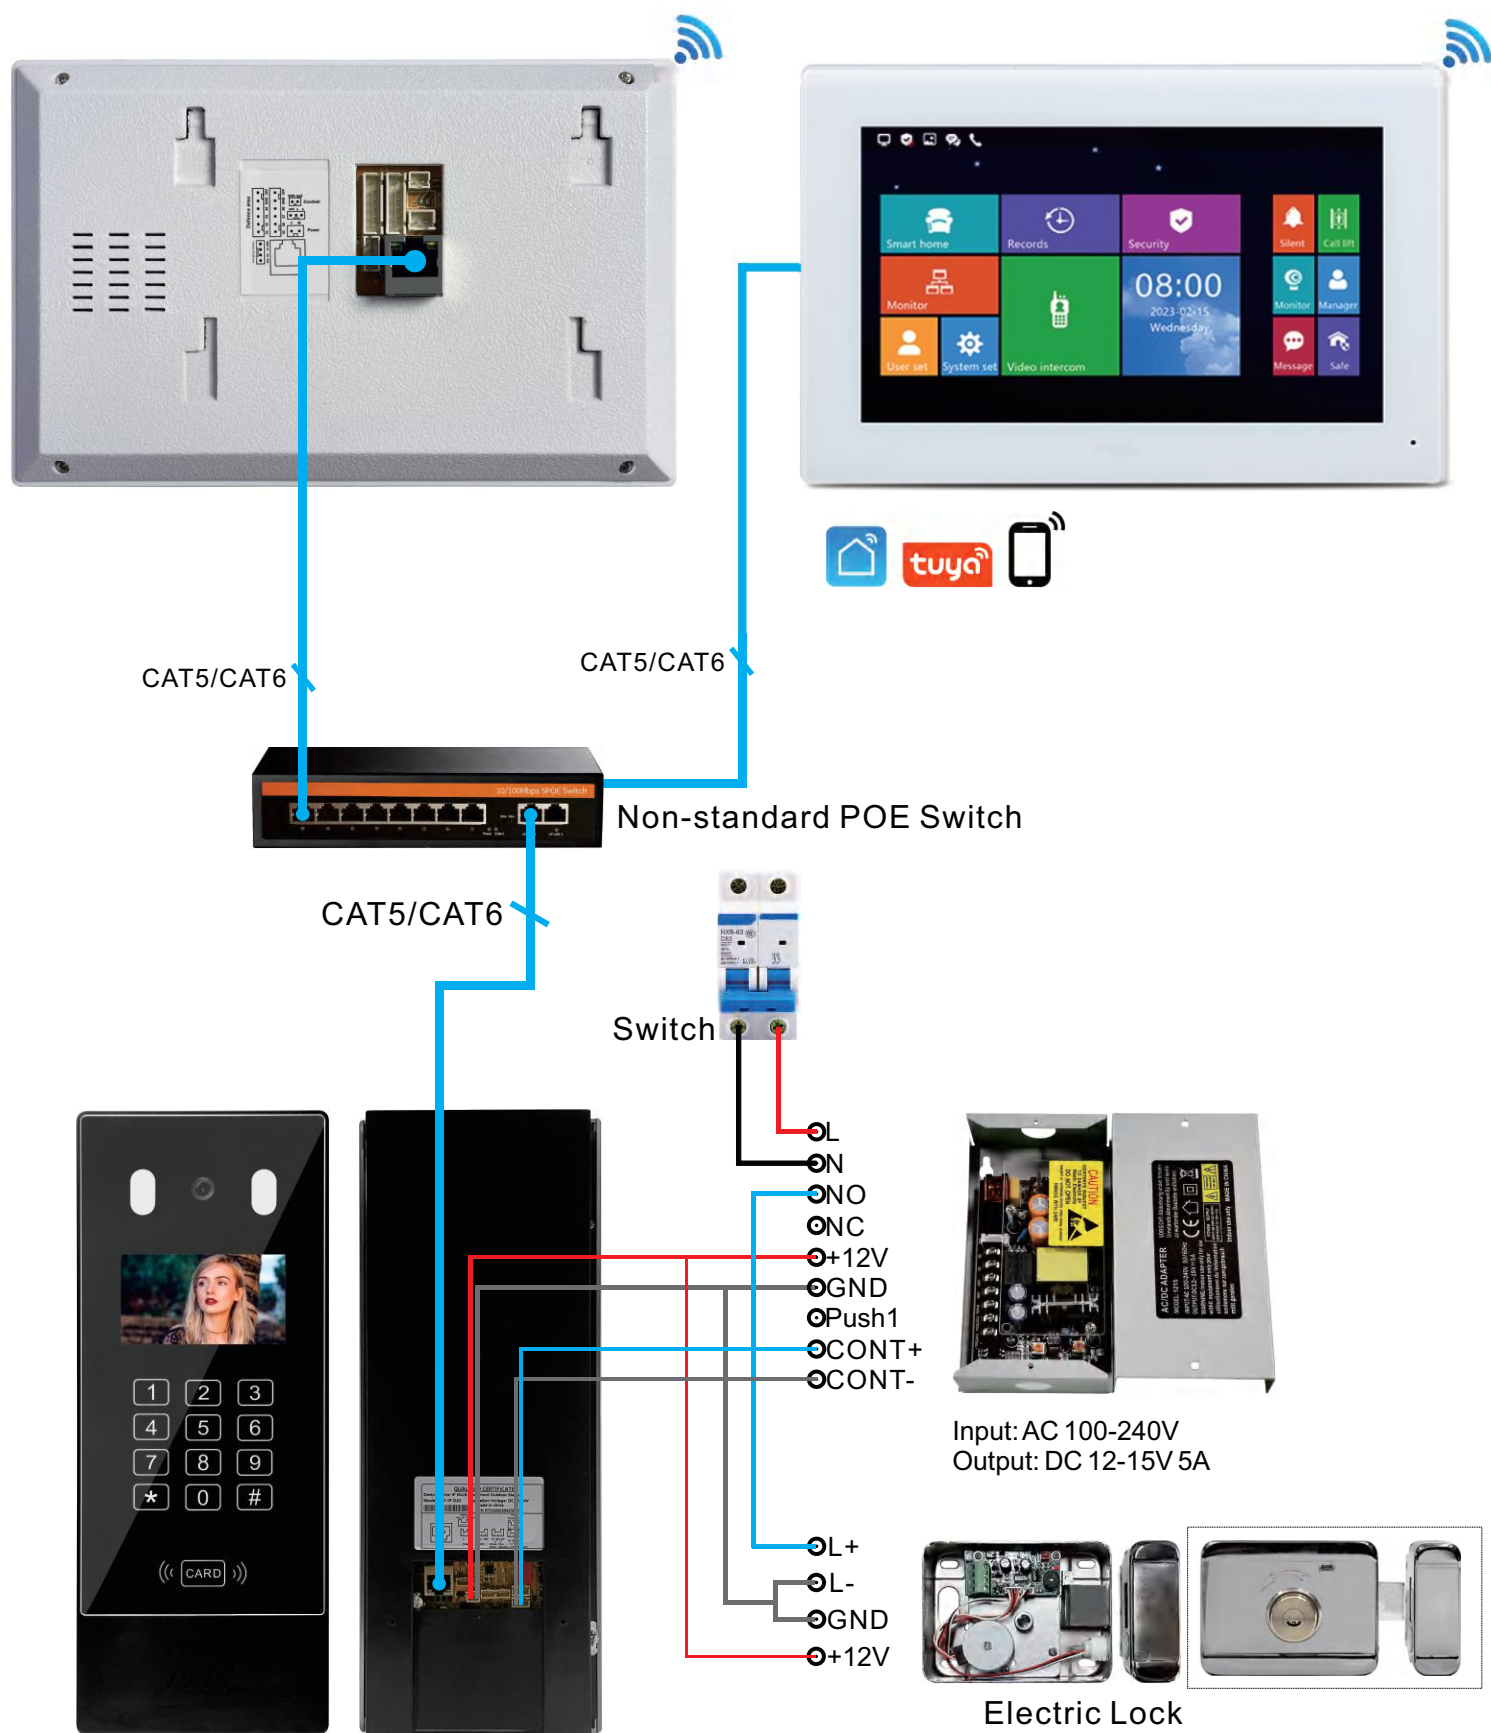


# Wiring Diagram(1 to 1) (Ethernet Cable)

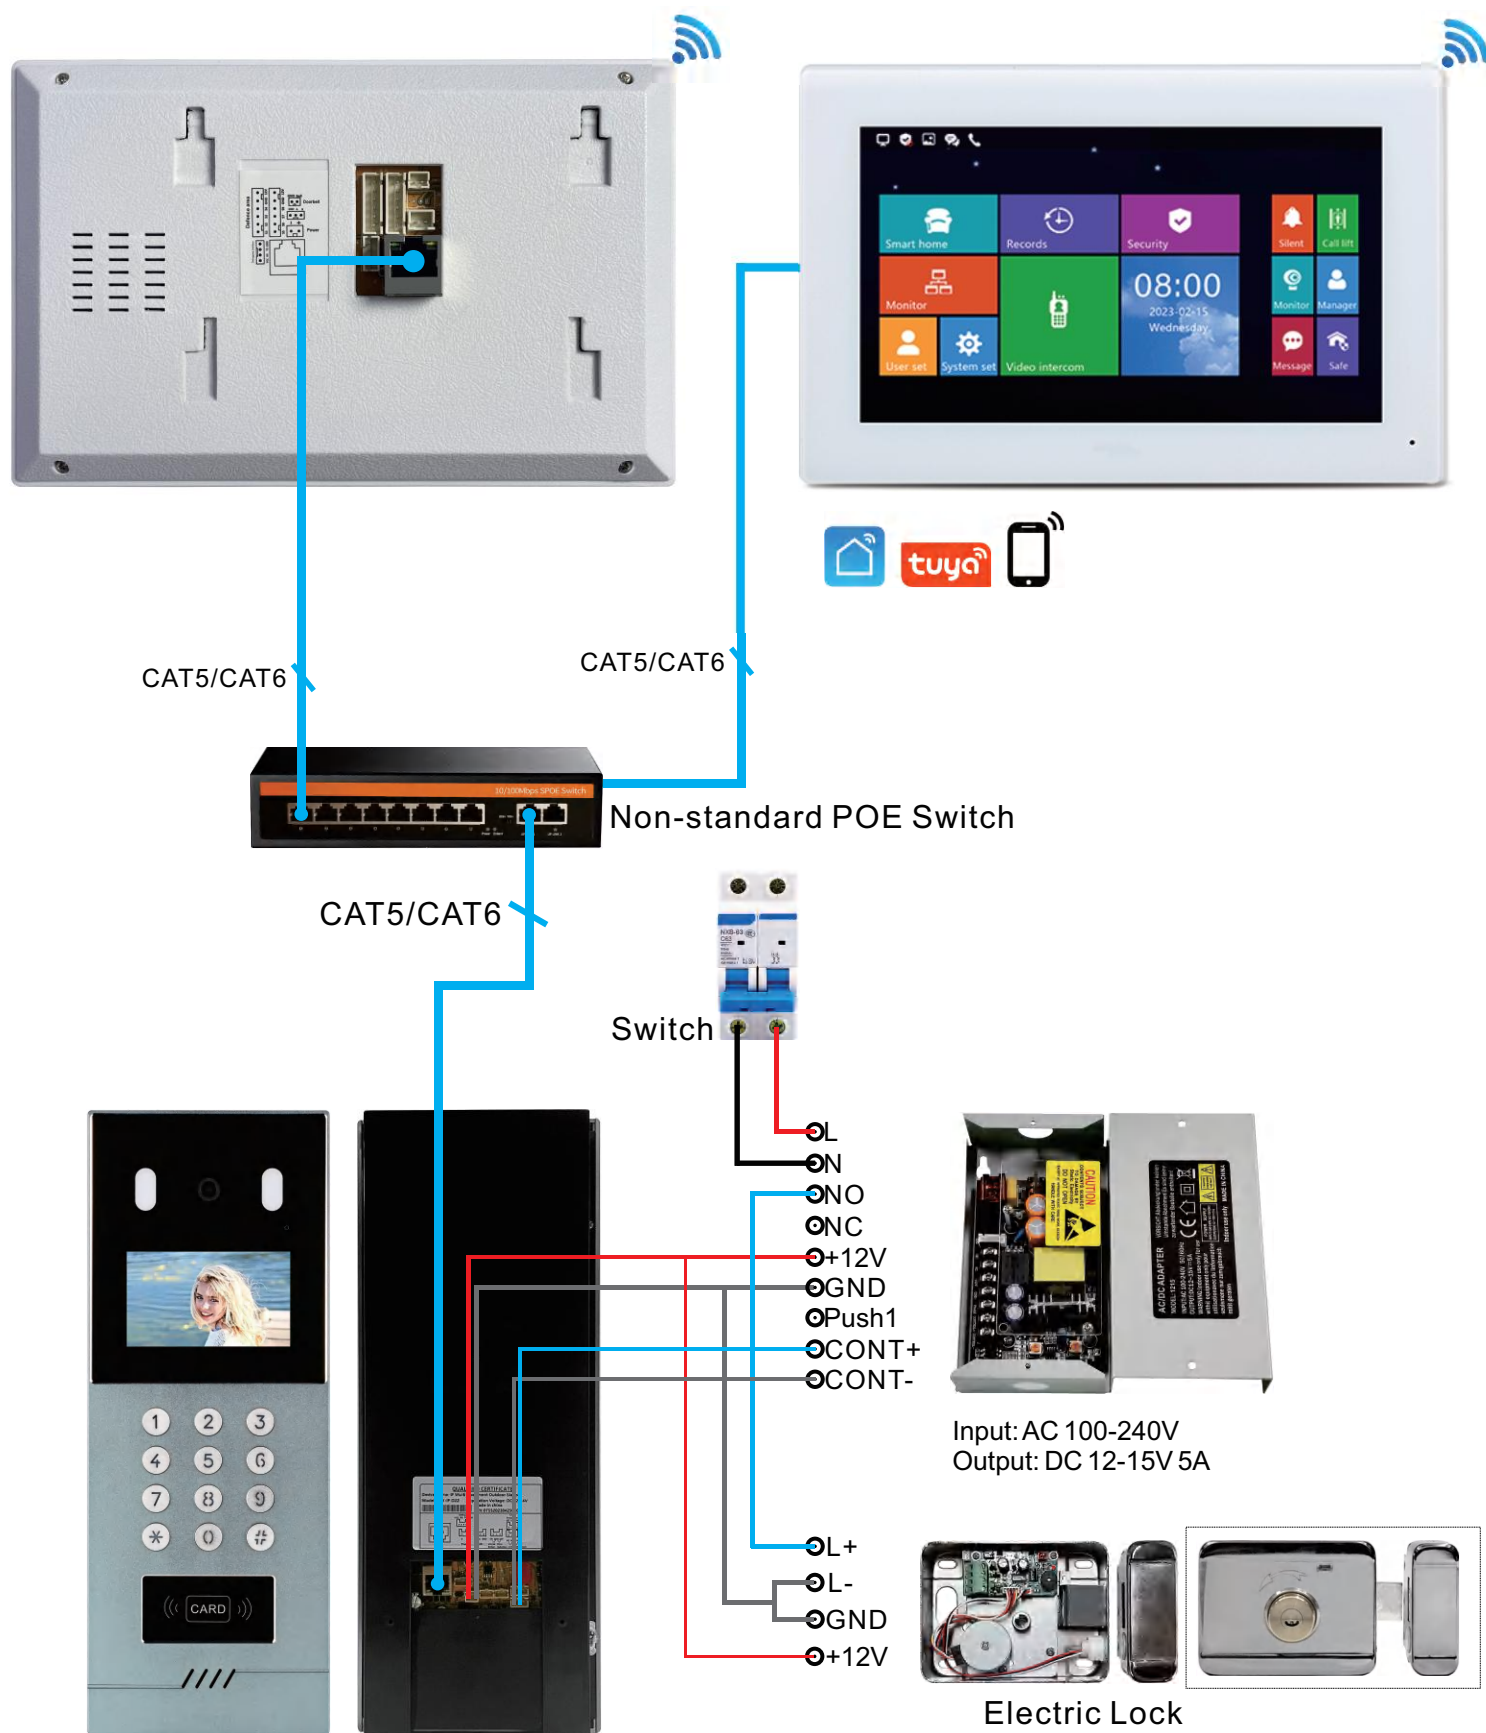

# Local LAN Networking Diagram (1 ~ 9999 Monitors)

Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

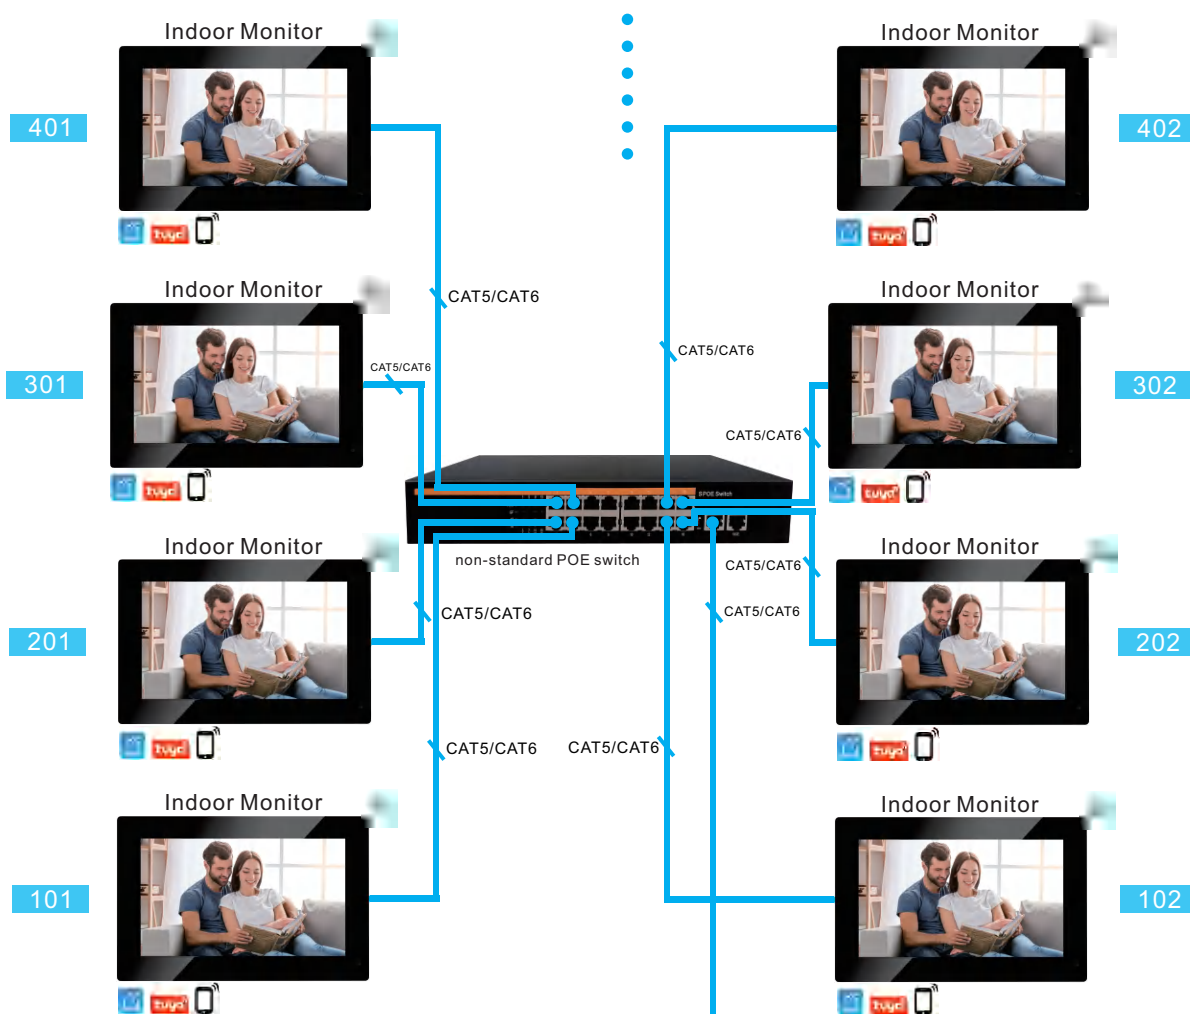


network cable CAT5/CAT6 — main line in unit


4 wires(RVV 4×1.0) — outdoor station to power

2 wires(RVV 2×1.0) — lock to power

2 wires(RVV 2×1.0) — exit button to power

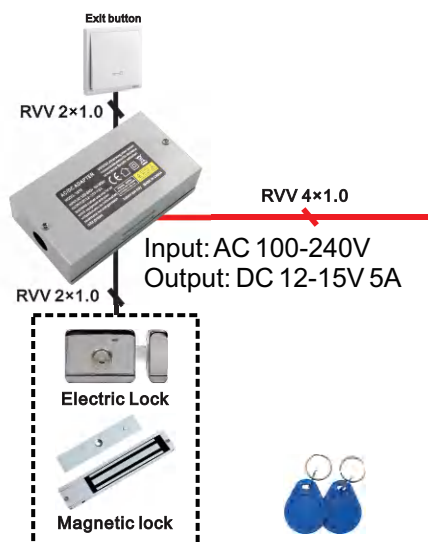


4.3-inch outdoor station

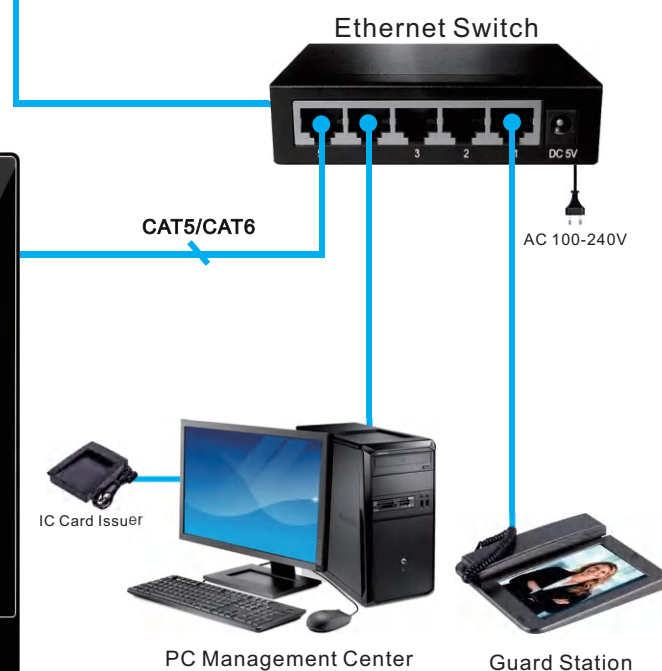

# Local LAN Networking Diagram (1 ~ 9999 Monitors)

Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

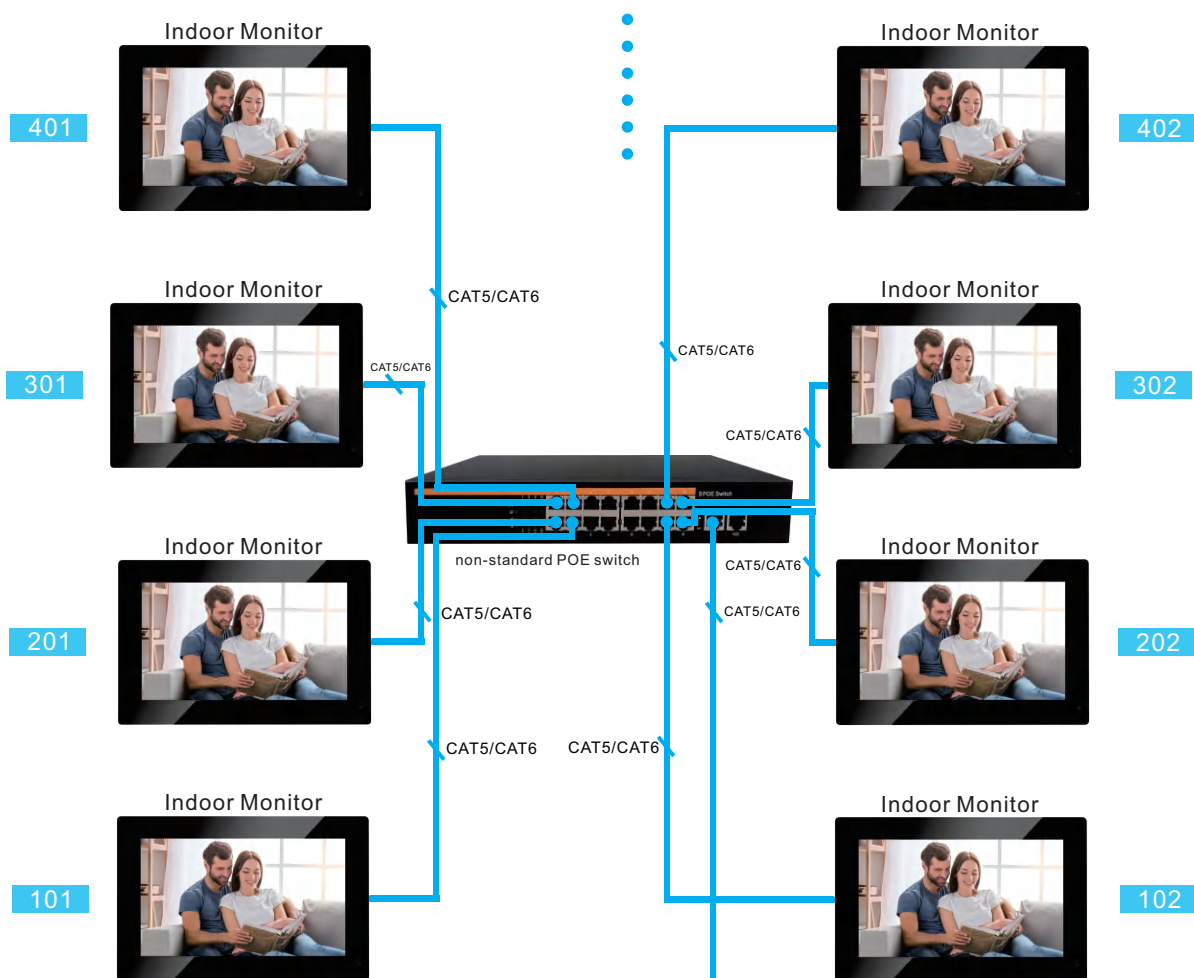


network cable CAT5/CAT6 — main line in unit


4 wires(RVV 4×1.0) — outdoor station to power

2 wires(RVV 2×1.0) — lock to power

2 wires(RVV 2×1.0) — exit button to power

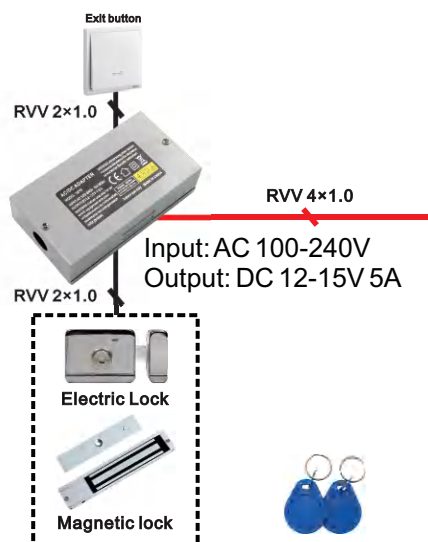


4.3-inch outdoor station

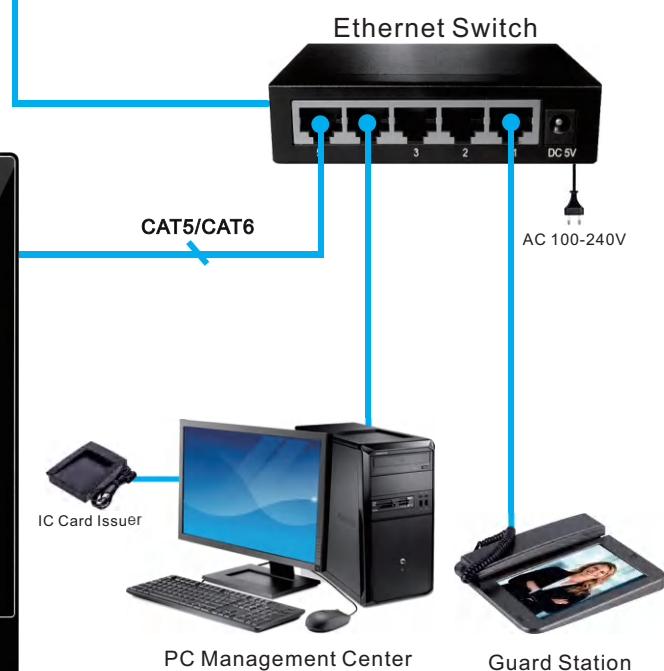

# Local LAN Networking Diagram (1 ~ 9999 Monitors)

Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

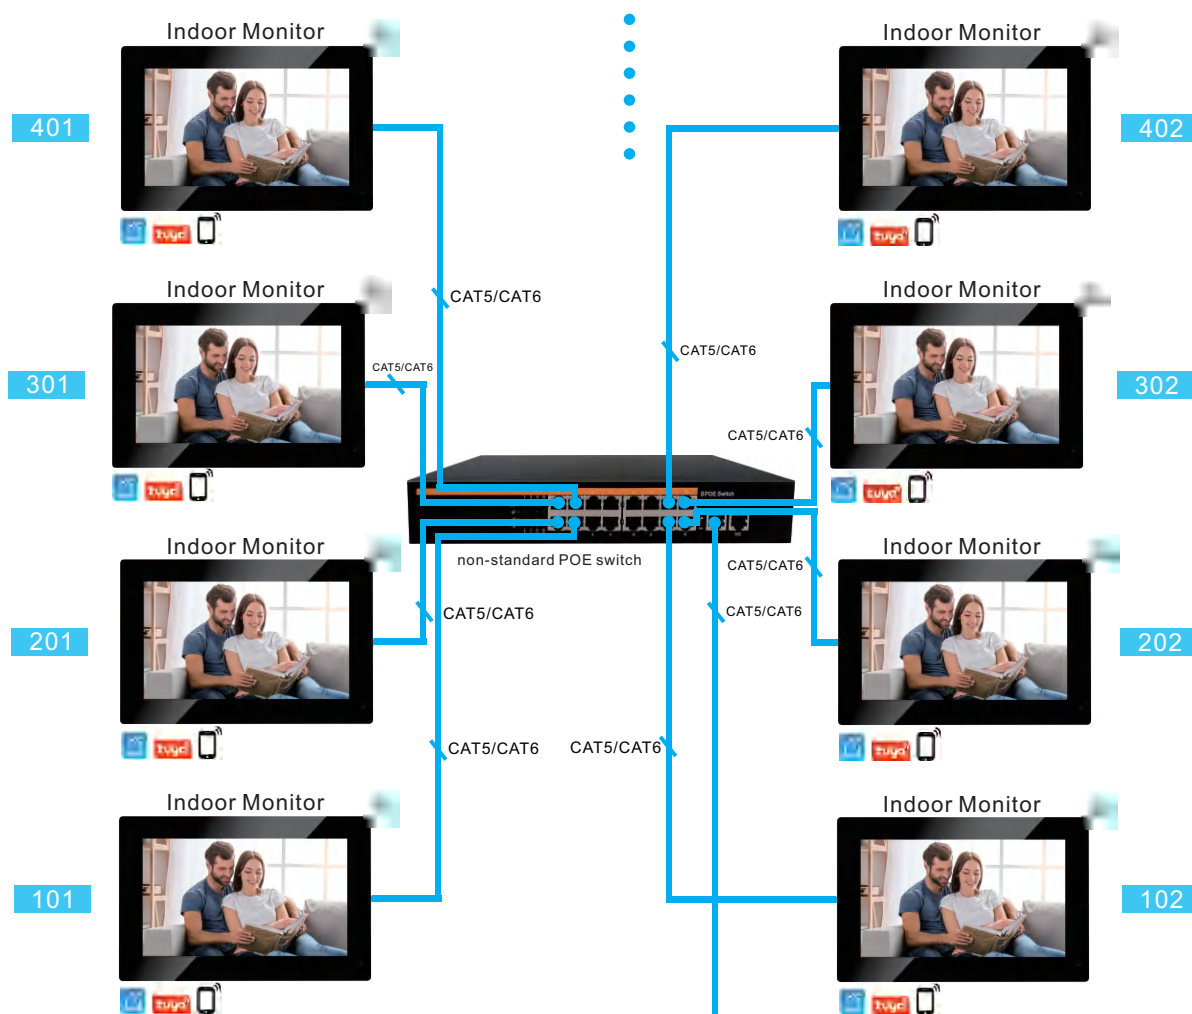


network cable CAT5/CAT6 — main line in unit


4 wires(RVV 4×1.0) — outdoor station to power

2 wires(RVV 2×1.0) — lock to power

2 wires(RVV 2×1.0) — exit button to power

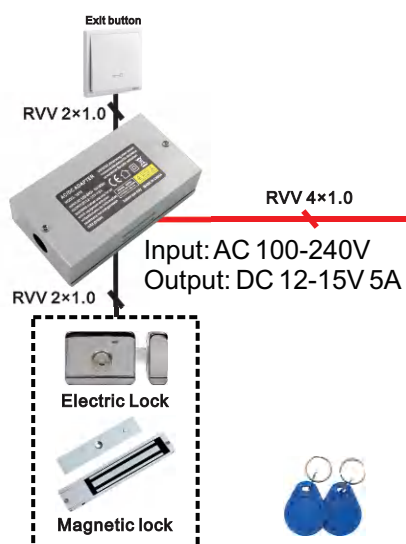


4.3-inch outdoor station

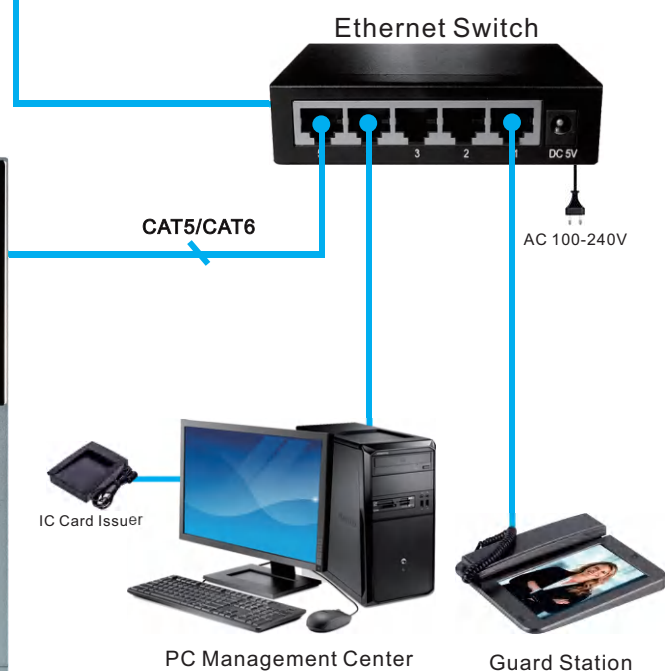

# Local LAN Networking Diagram (1 ~ 9999 Monitors)

Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

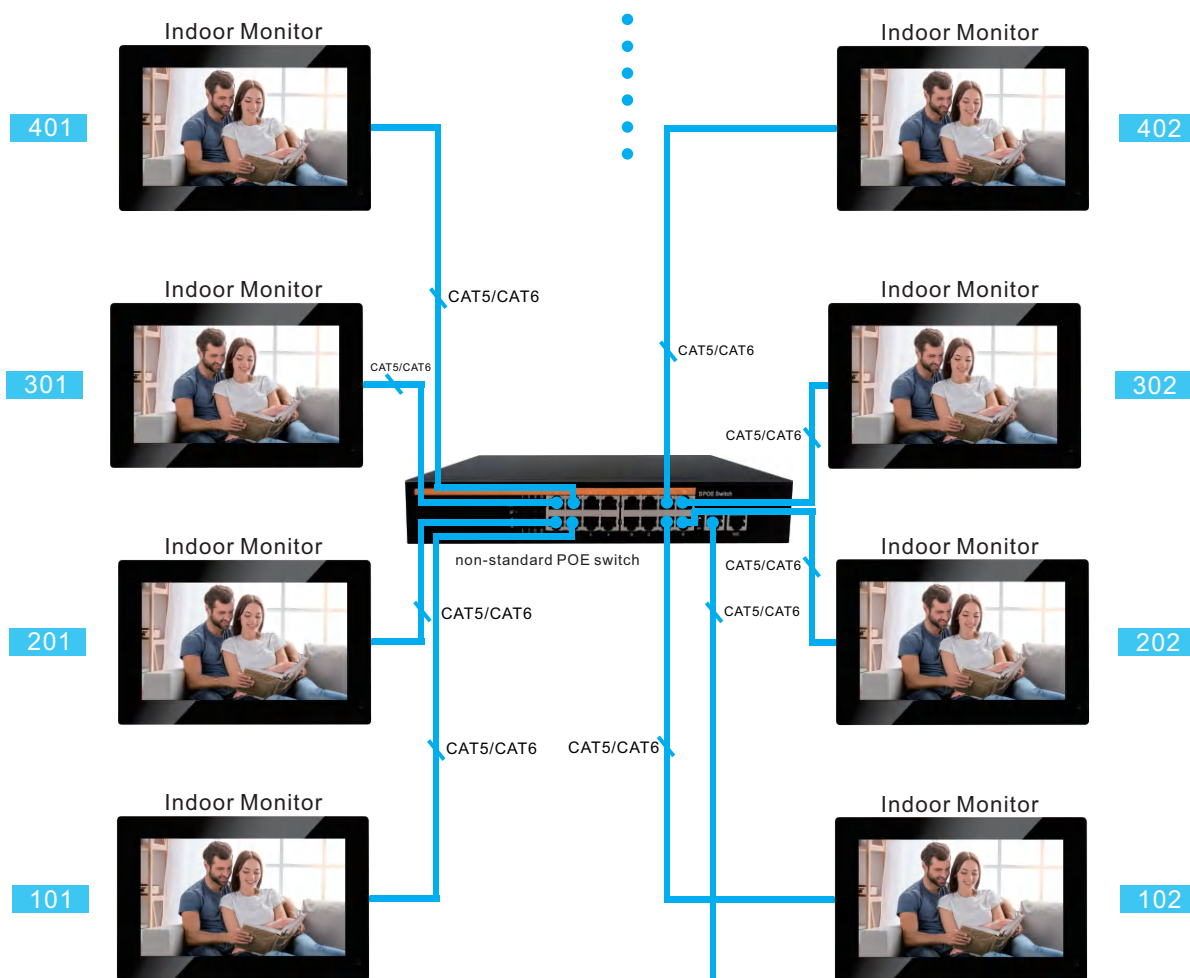


network cable CAT5/CAT6 — main line in unit


4 wires(RVV 4×1.0) — outdoor station to power

2 wires(RVV 2×1.0) — lock to power


2 wires(RVV 2×1.0) — exit button to power

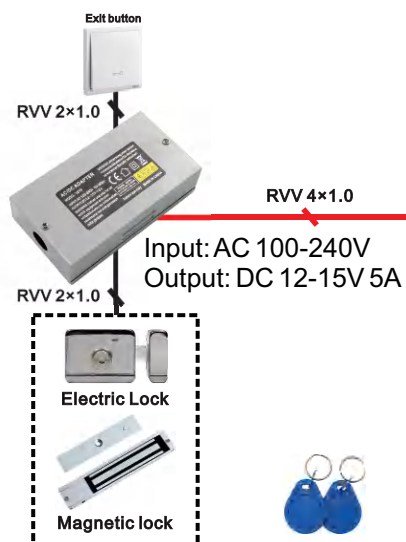


4.3-inch outdoor station

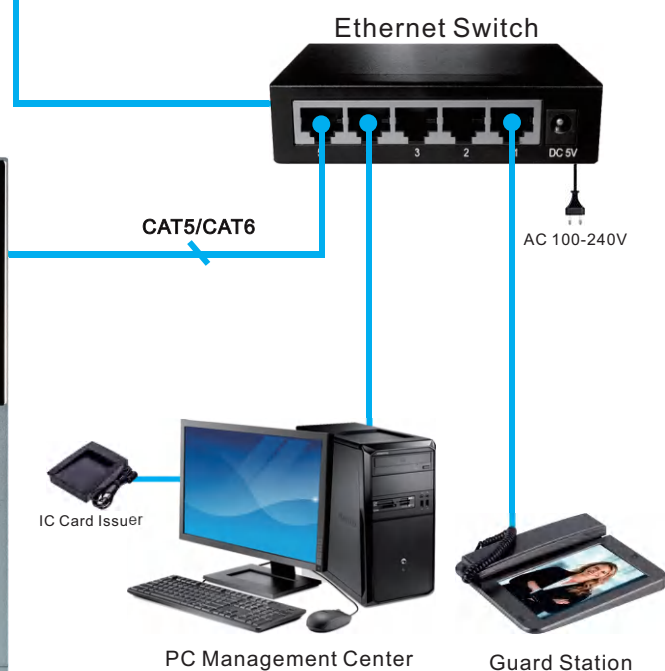

# Wiring Diagram(1 to 1) (2 Wires)

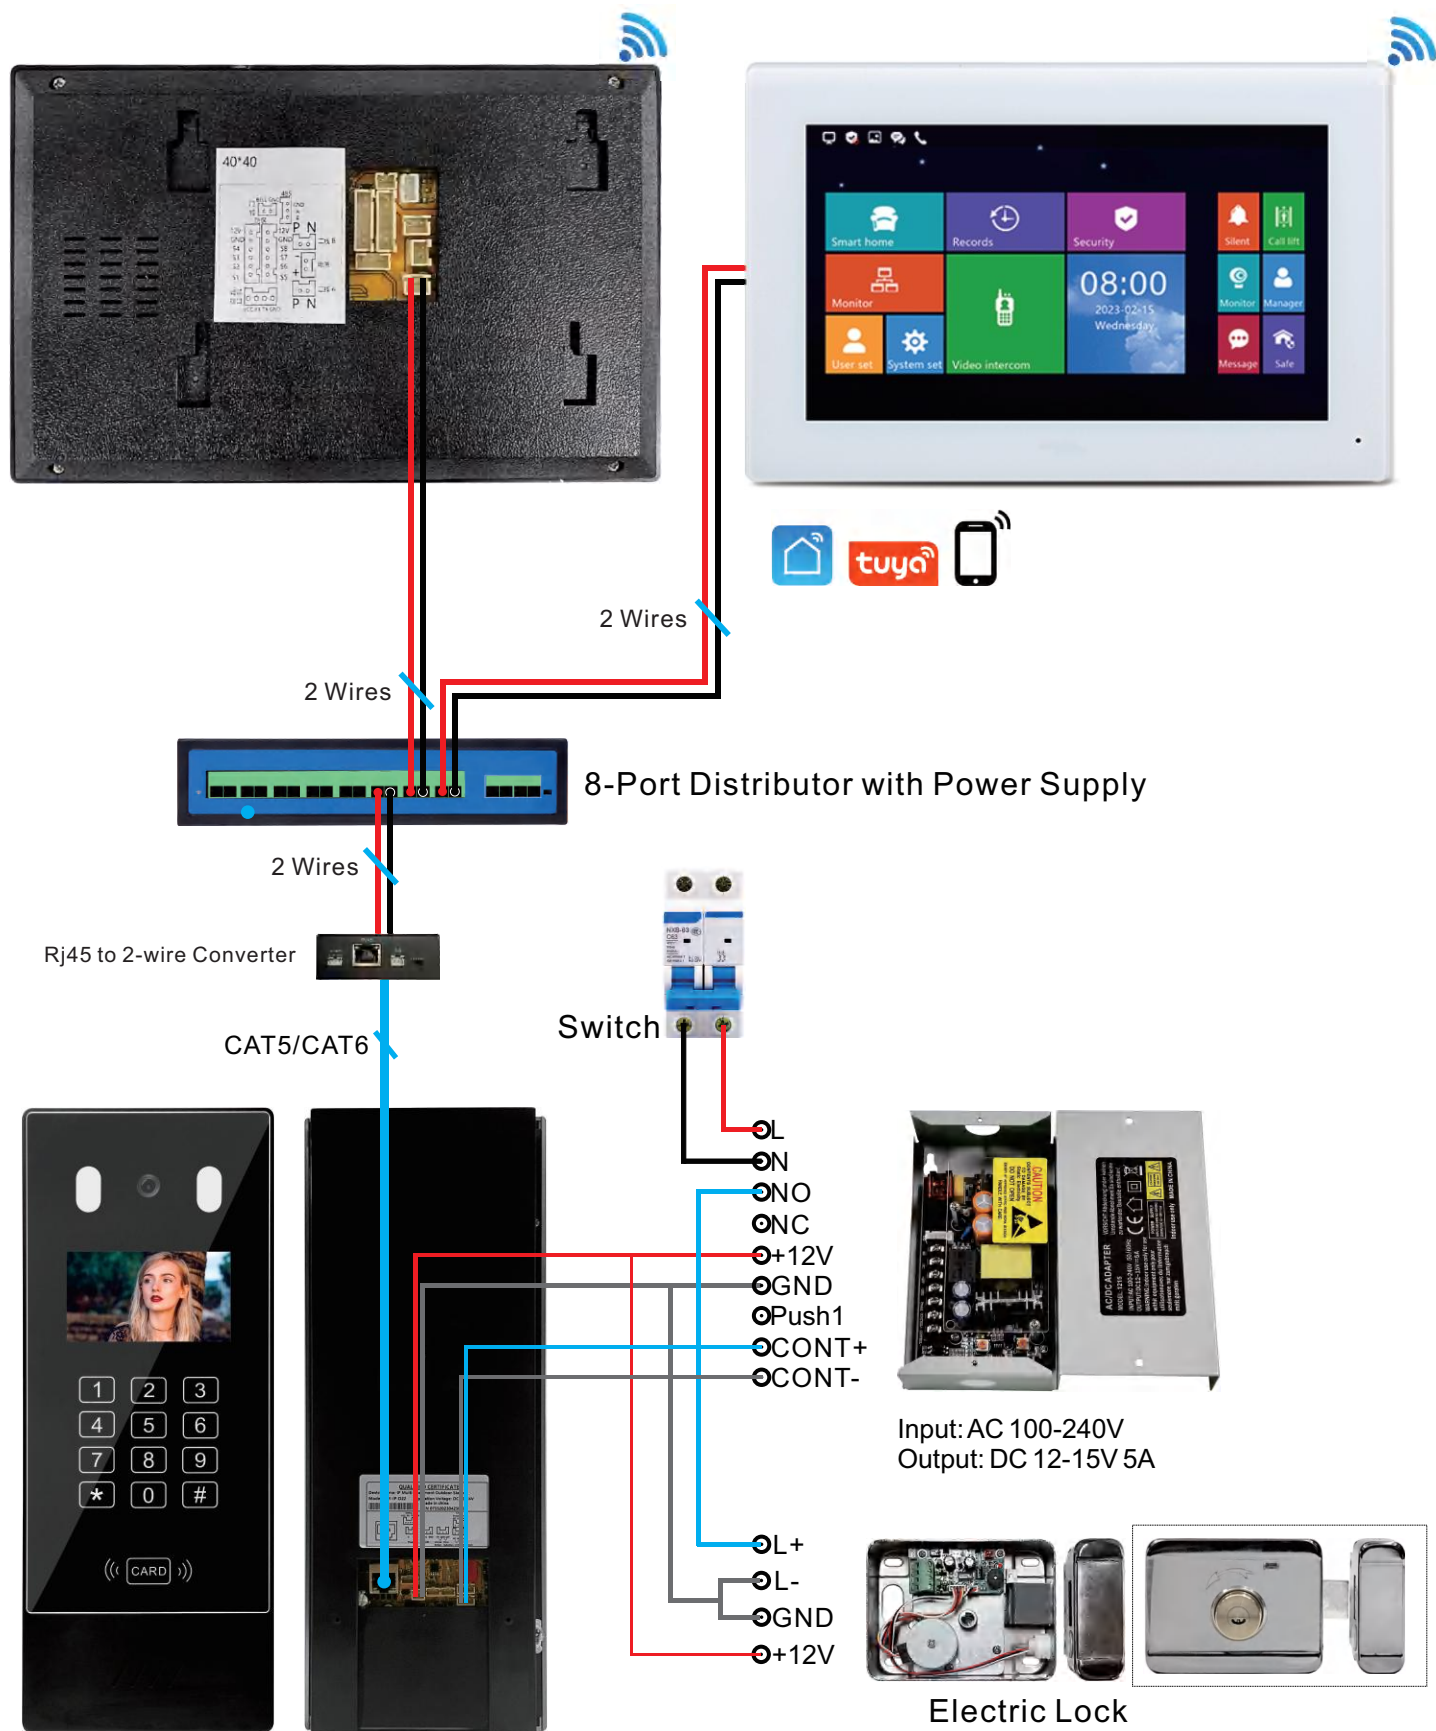


# Wiring Diagram(1 to 1) (2 Wires)

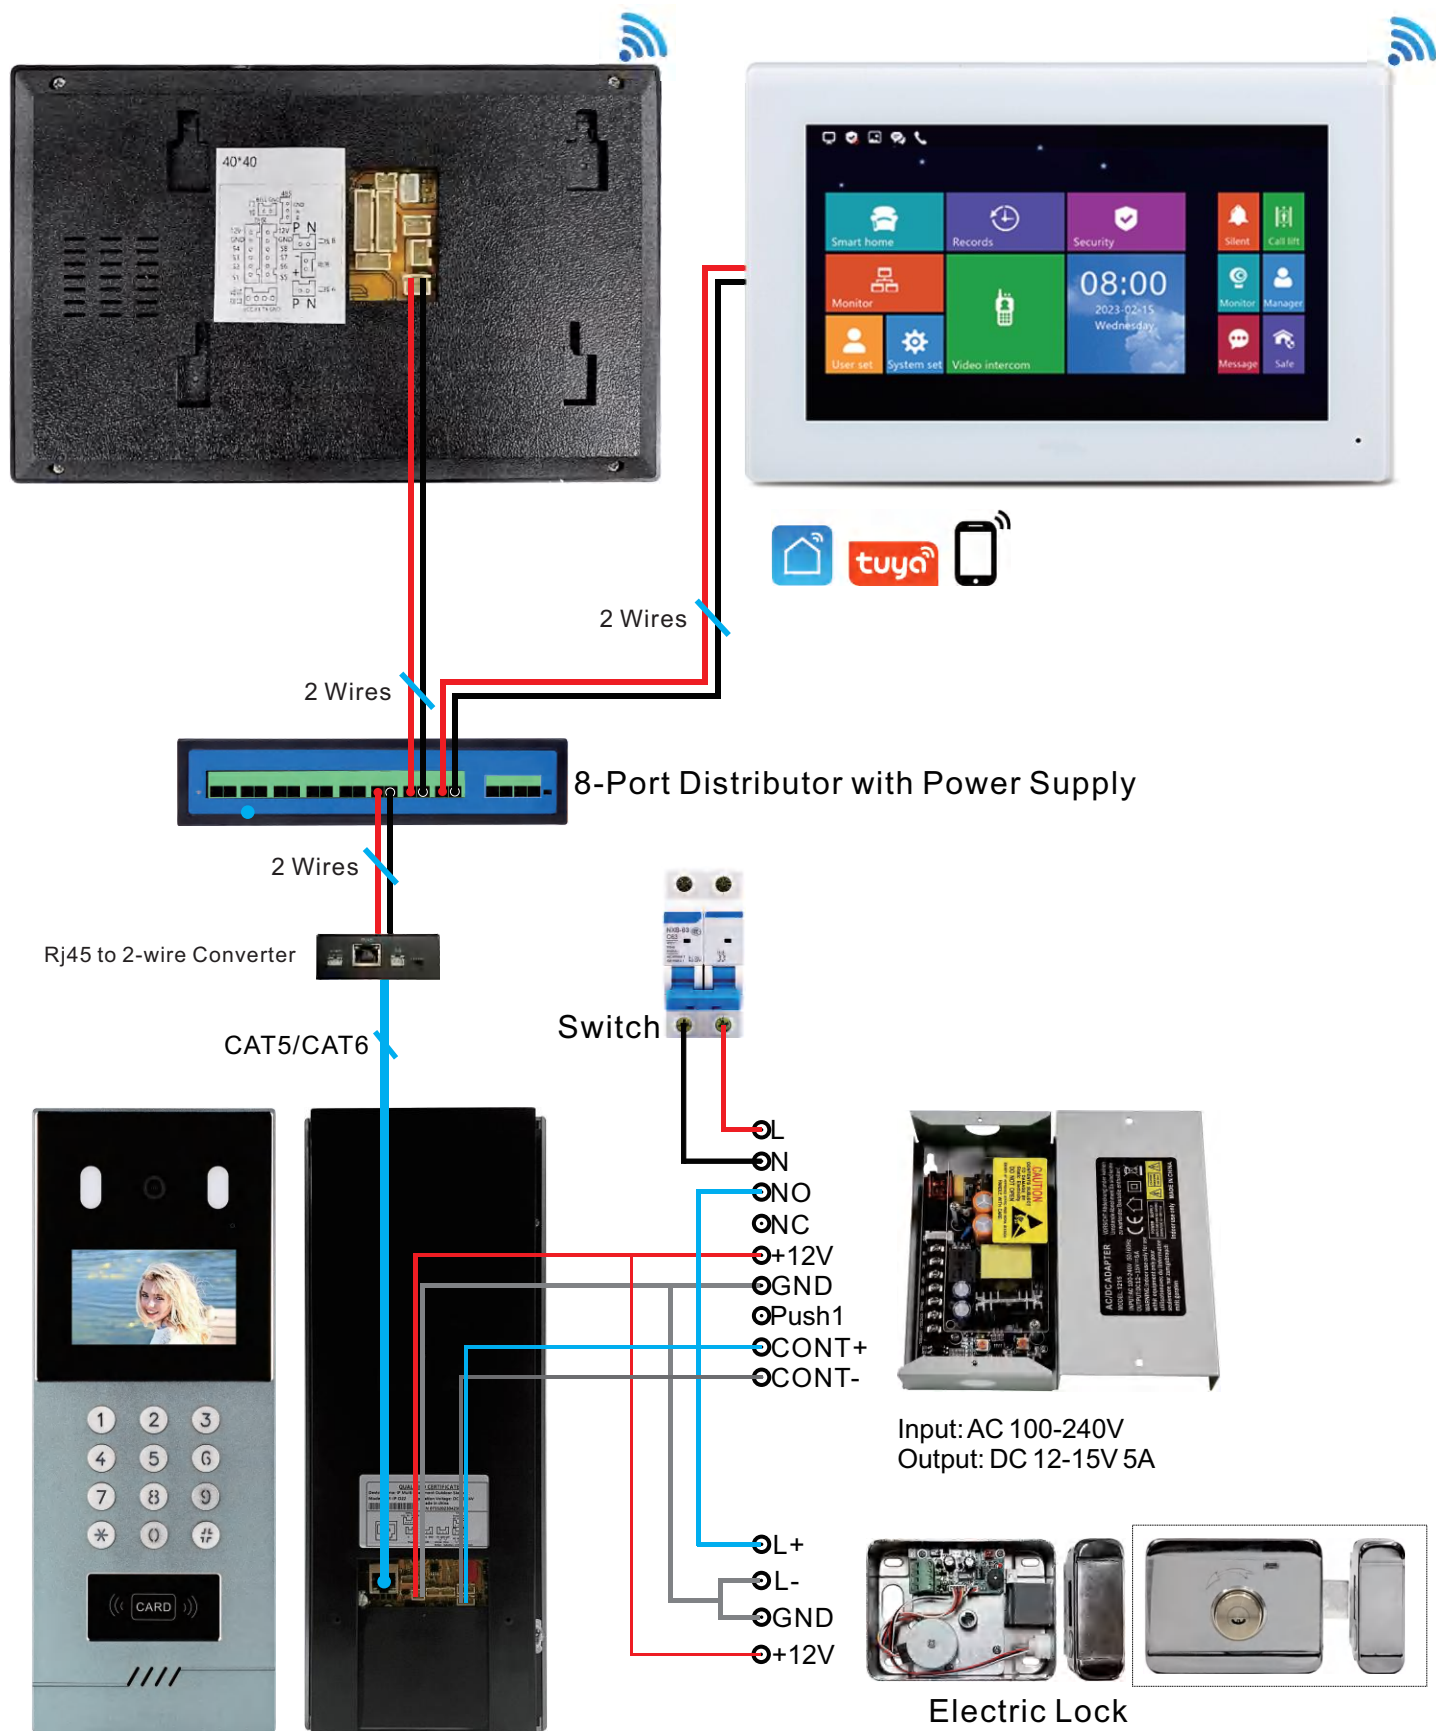


# 2-wire IP Apartment Diagram (1~9999 Monitors )

Optional

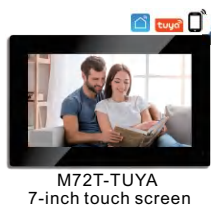


Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

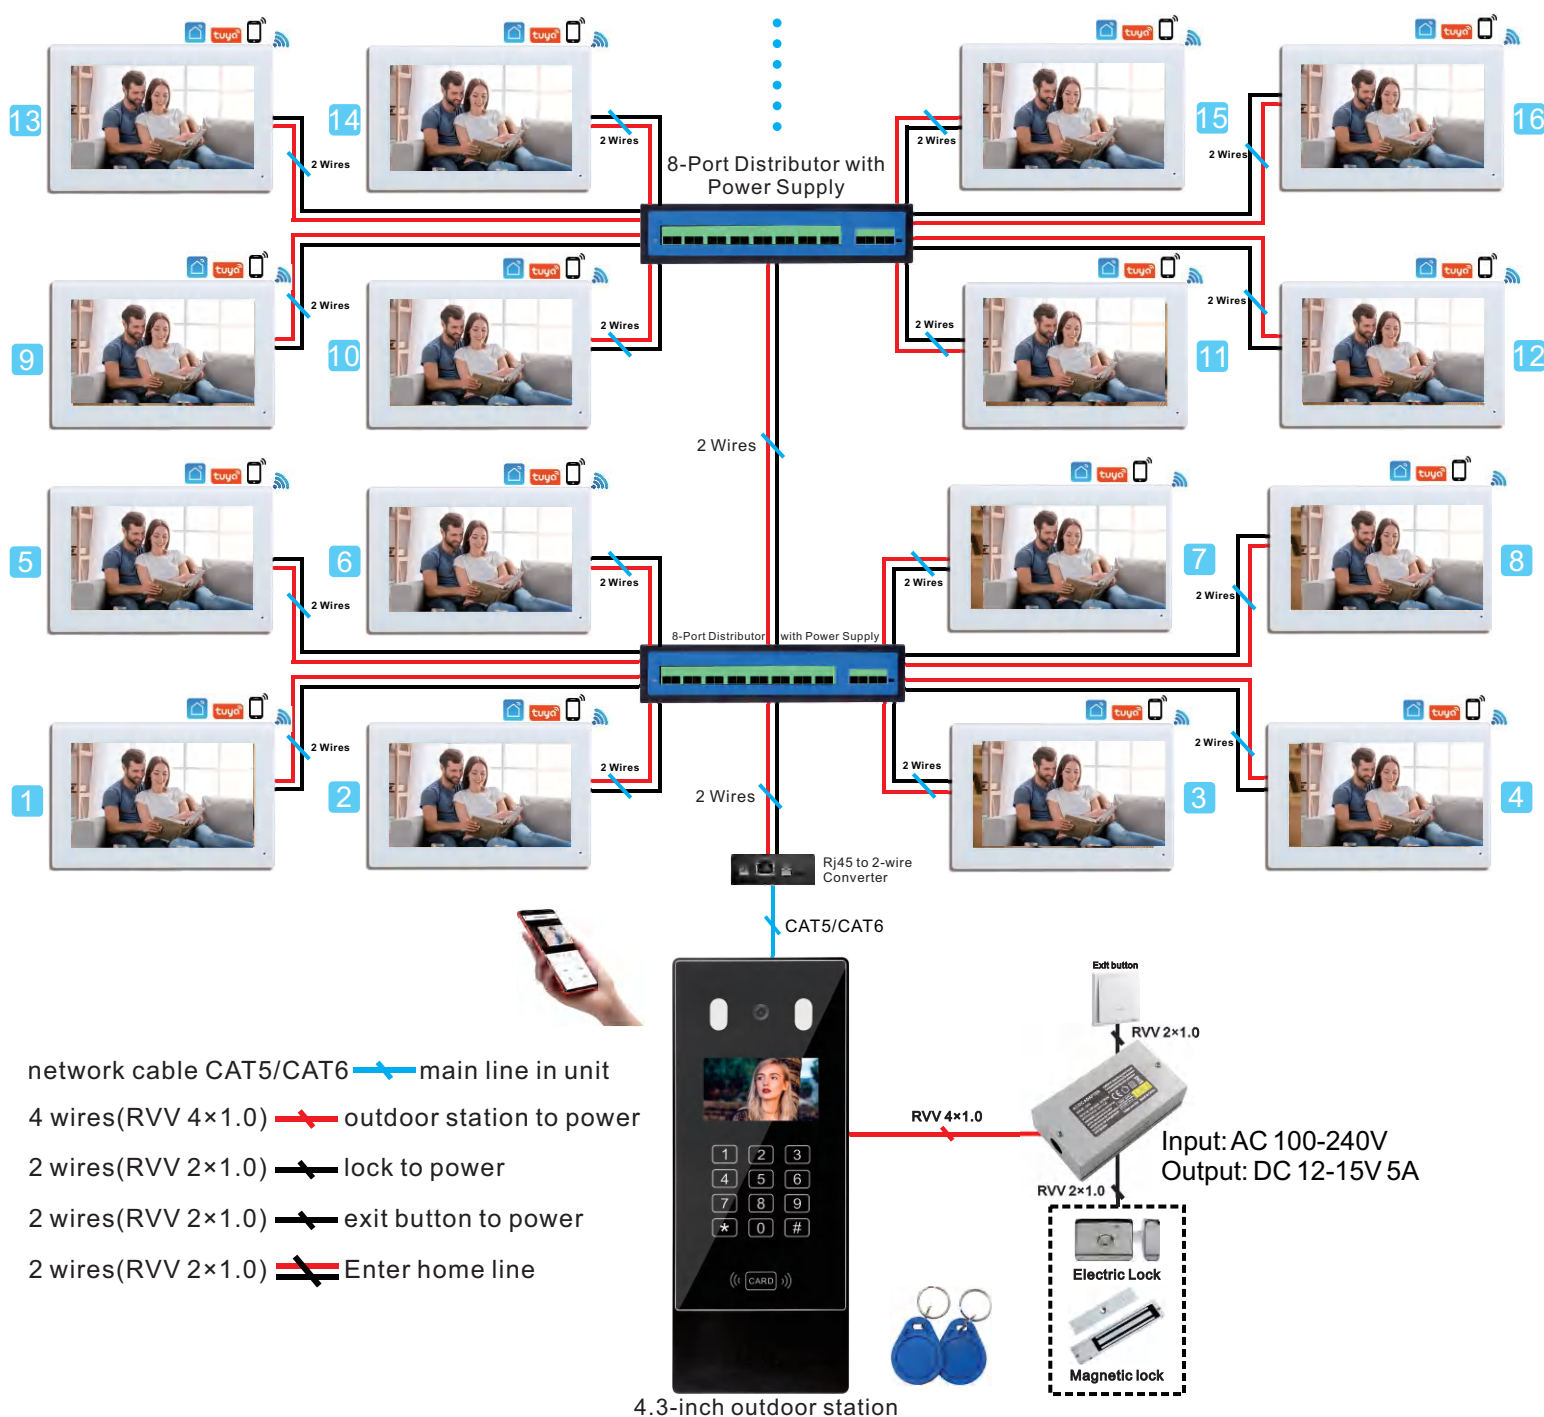

## 2-wire IP Apartment Diagram ( 1 ~ 9999 Monitors )


## Optional

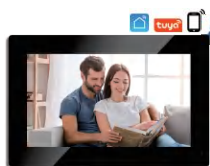

M72T-TUYA  
7-inch touch screen



M72T-TUYA  
7-inch touch screen

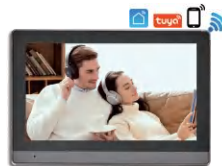


M76T-TUYA  
7-inch touch screen



M92T-TUYA  
10.1-inch touch screen

Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

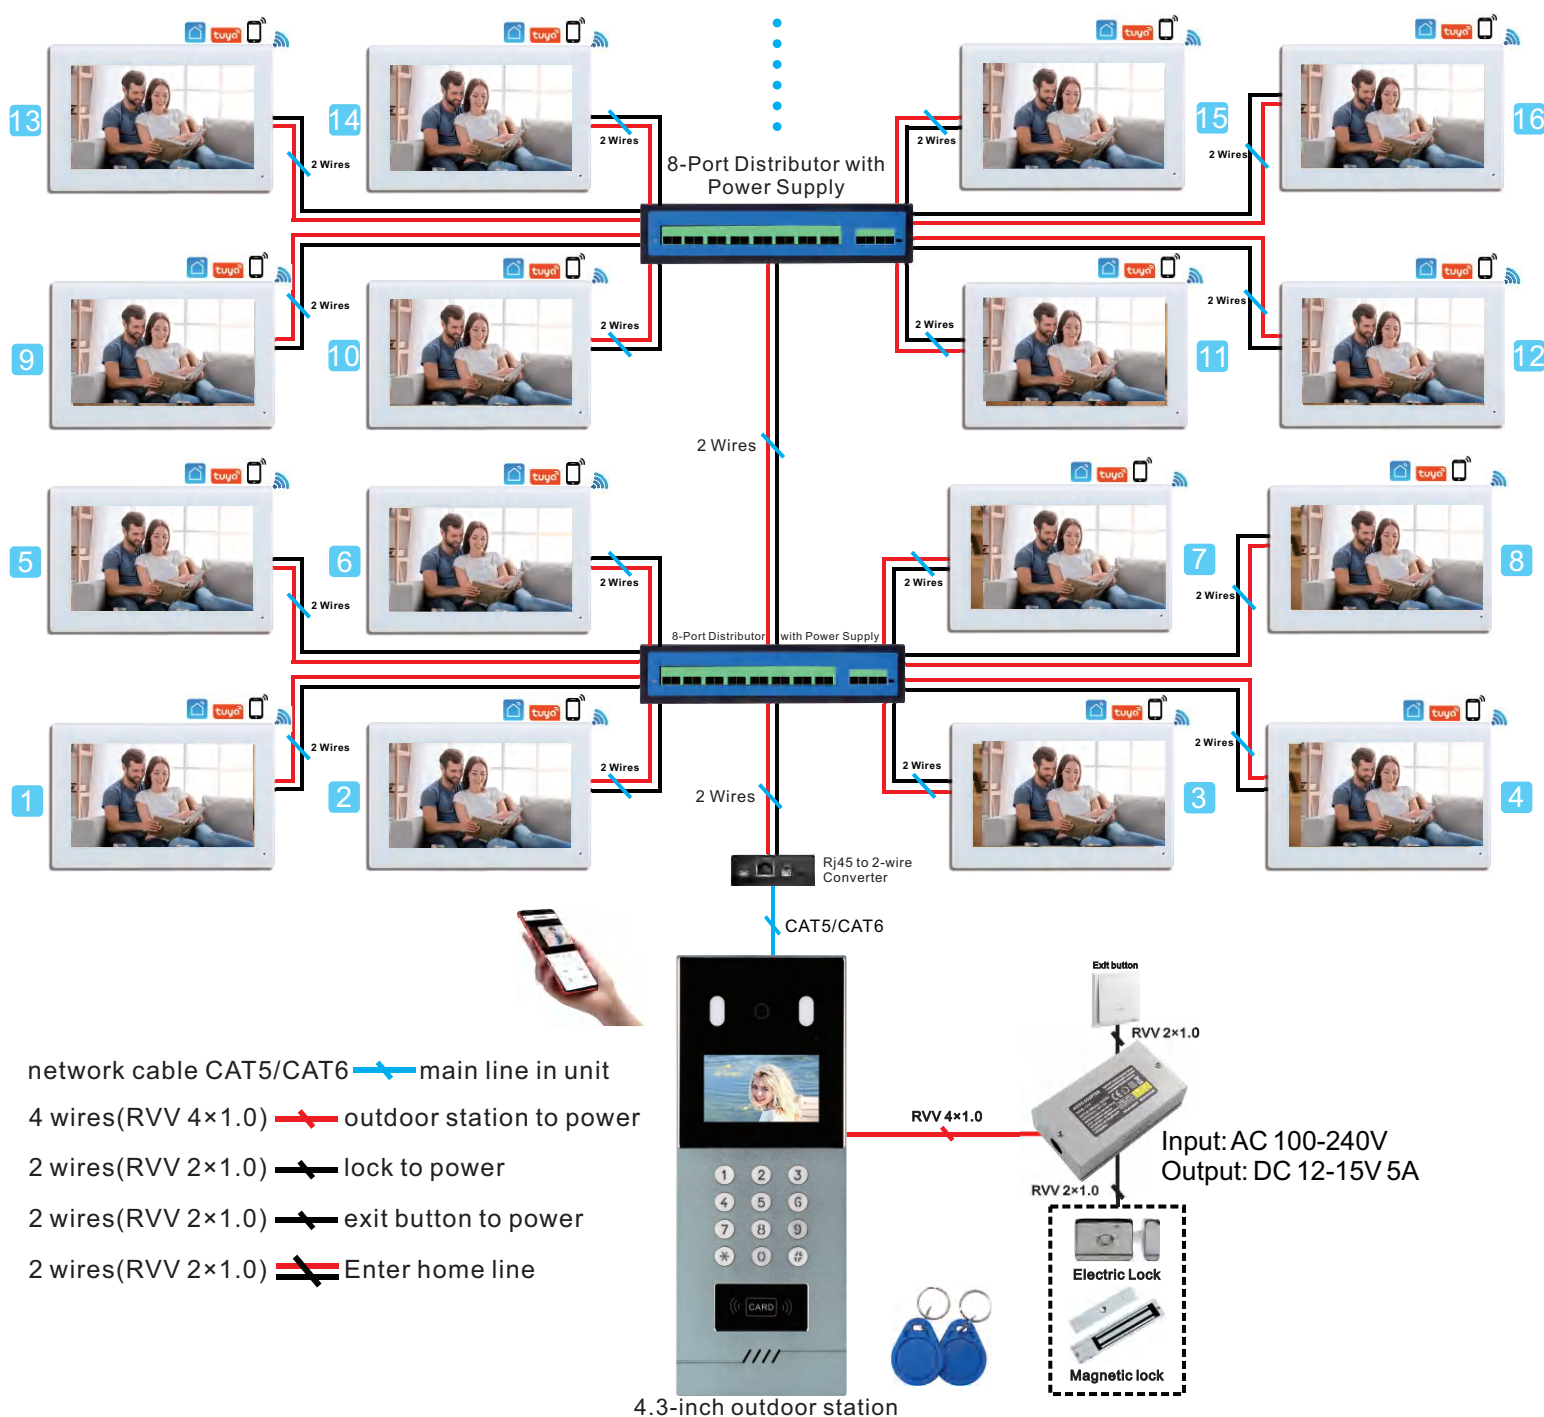


# 1.Homepage

Description: Call residents, unlock for visitors, and press “#” for additional functions.




I. Call Resident: a) Press the room number, such as 1, 01, 101, or 0101, to call the resident in apartment buildings.

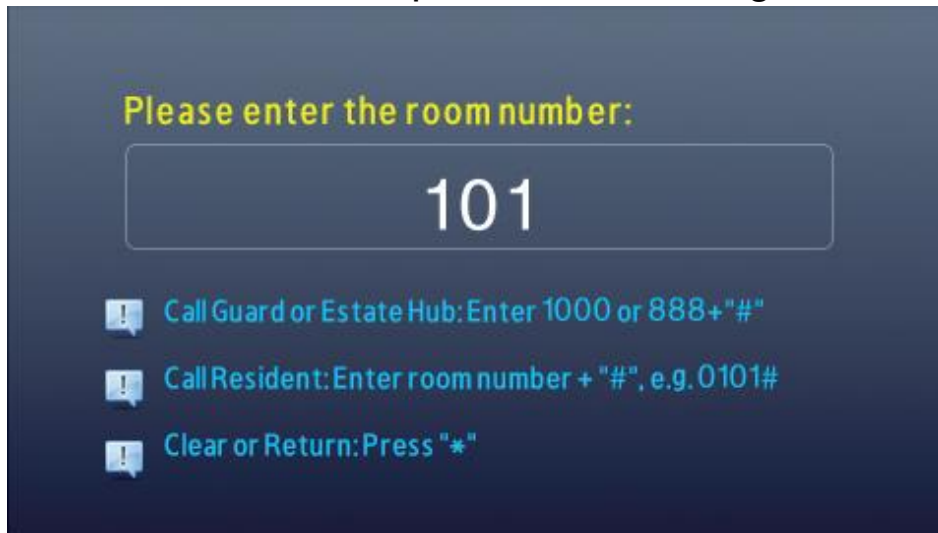

(b). When used for a community gate, press the entire 10-digit code to call the resident. For example, the first 6 digits represent Zone 01, Building 01, and Unit 01. The last 4 digits indicate the room number: "02" means Floor 02, and "04" means Room 04.



II. To call the Guard Station or PC Management Center, input "1000" to make the call.

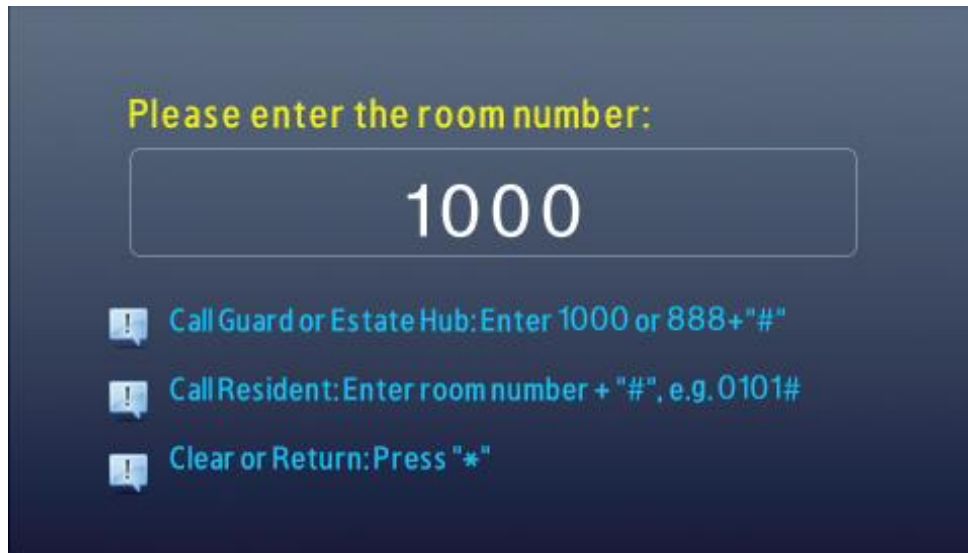

(2) Press “#” to access additional functions.



I. Resident Password to Unlock


Press “1” to unlock using the resident password. Input the full 4-digit room number and press “#”. Then enter the 6-digit unlocking password (set in the monitor, default is “123456”) and press “#” to unlock.



## II.Public Password to Unlock


Press “2” to unlock using the public password. Enter the 6-digit public password and press “#” to unlock.

Default public password: “668899”.

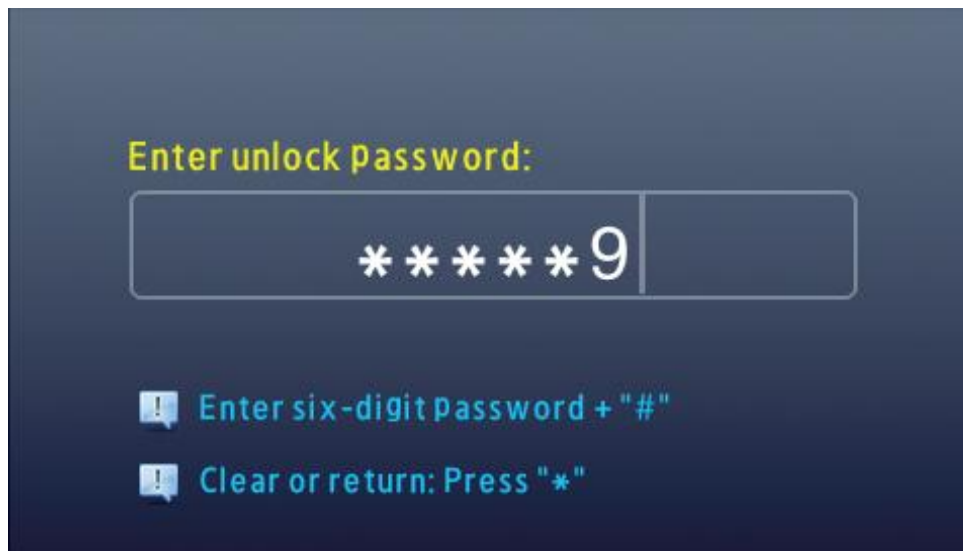


## III.System Settings

Press “0” to access system settings. The default system password is “666666”.

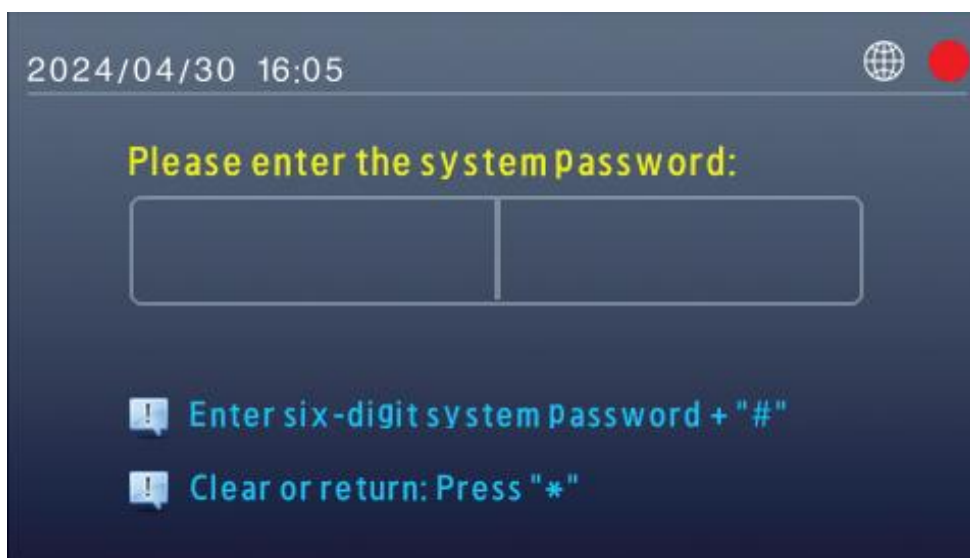



## 2.System Settings

The password to access system settings is “666666.”

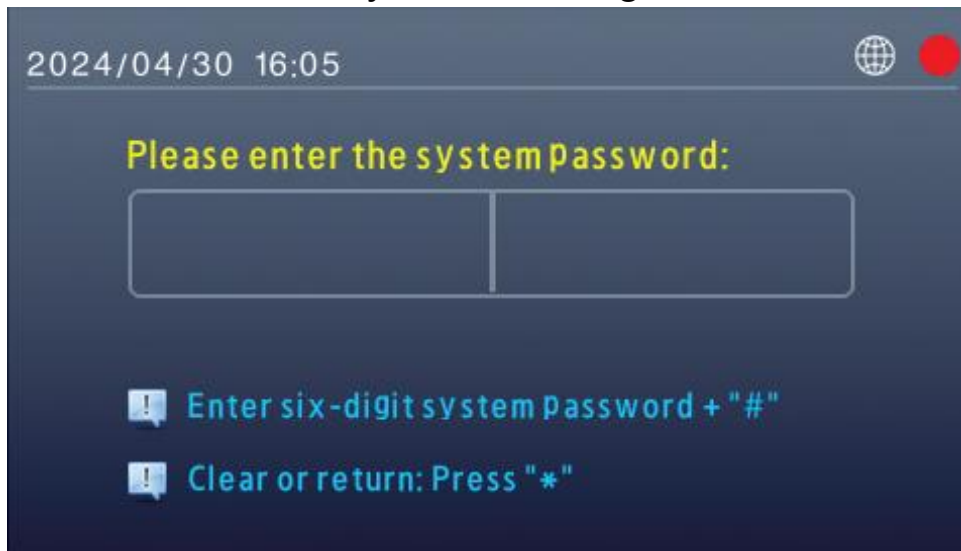

### (1)System Info

This page displays the outdoor station's address code, MAC address, IP address, subnet mask, gateway, server IP, software version, and NetCfg version.

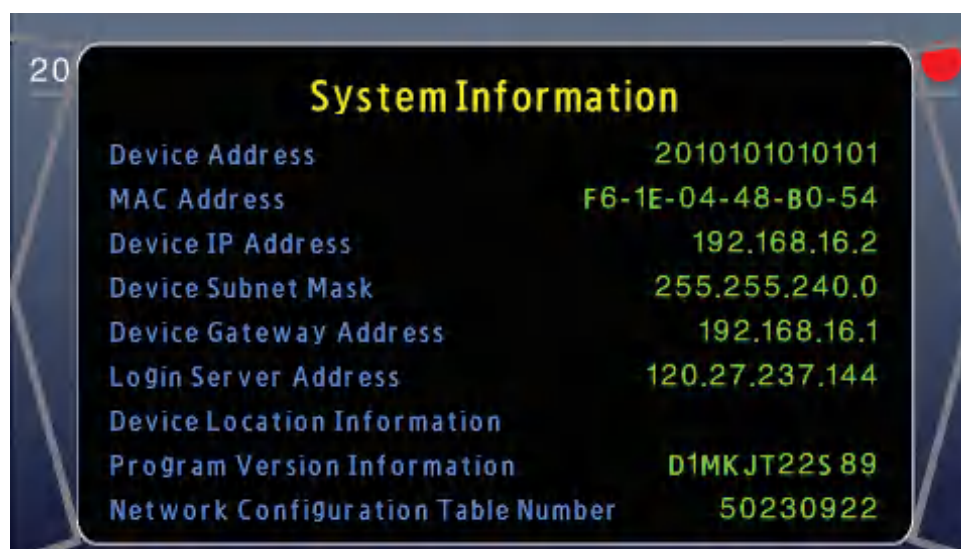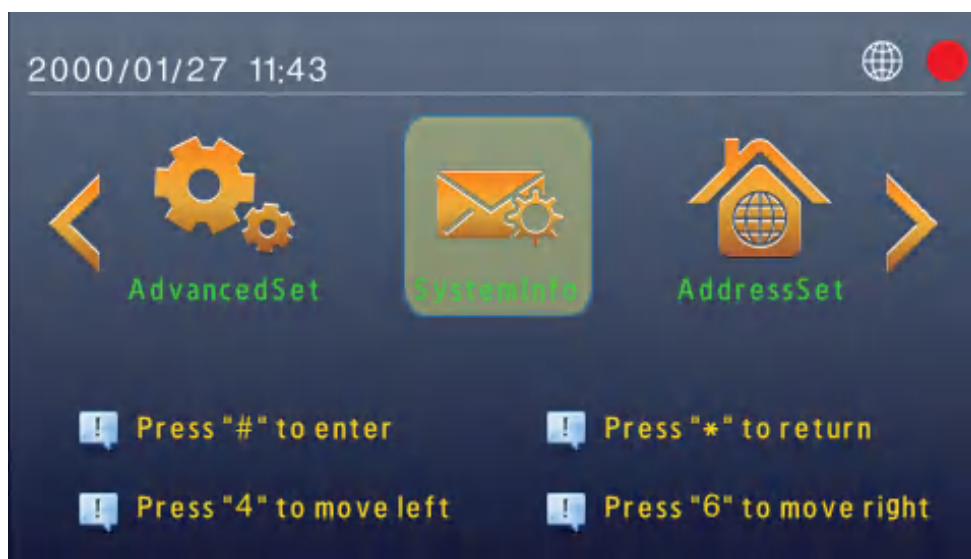

## (2)Address


Change the outdoor station's address code.



## (3)Unlock Pwd



Change the public unlocking password (default: "668899").



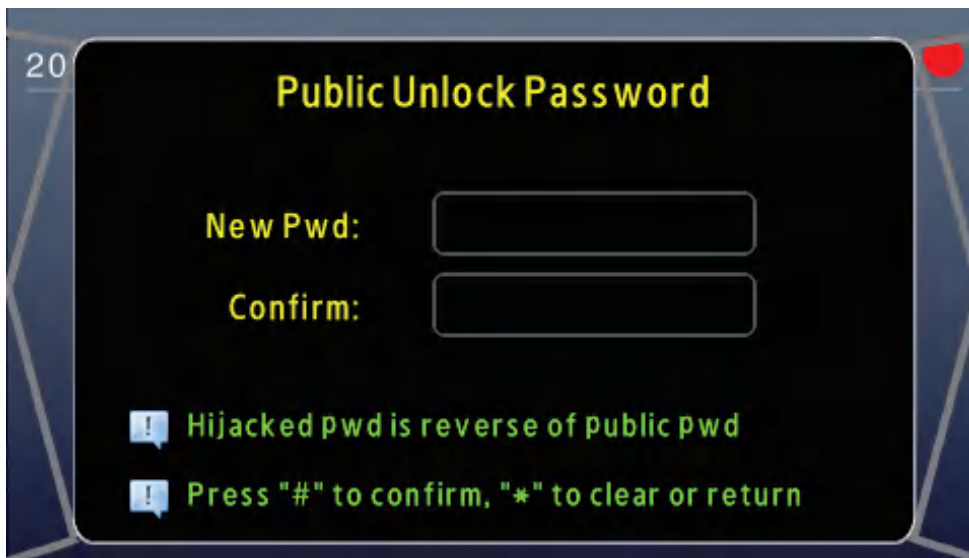



#### (4)PwdUnlock

Enable or disable the public password unlock and resident password unlock functions.

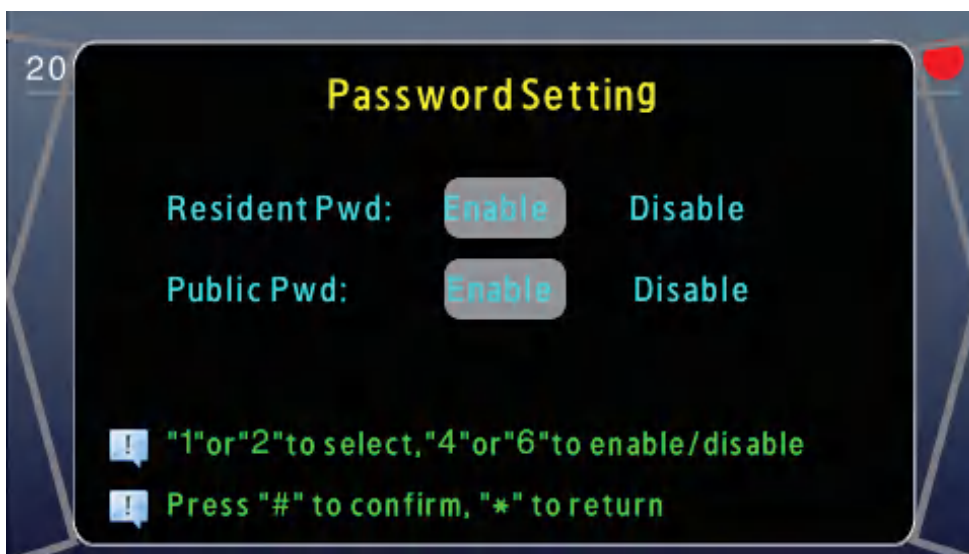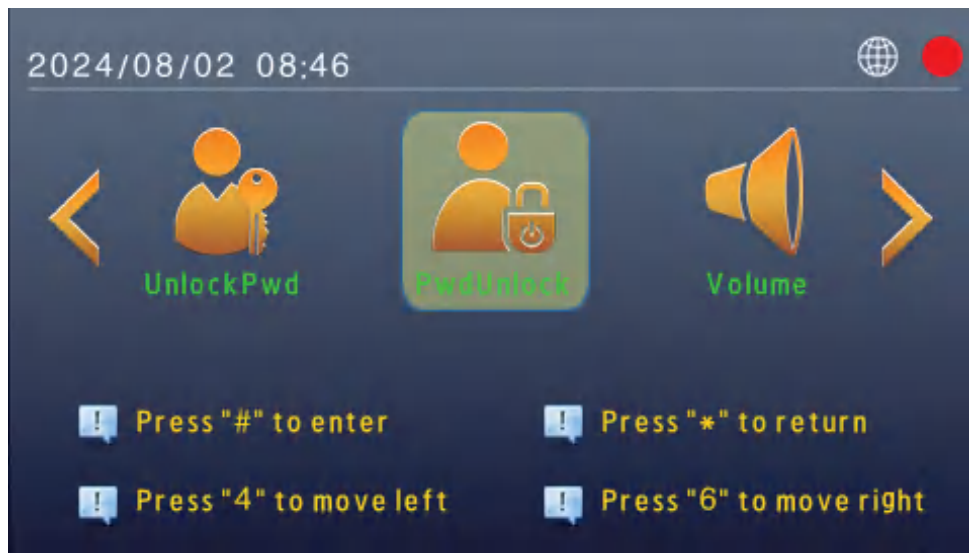


### (5)Volume


Adjust the call, ringtone, and key volume. Press 1, 2, or 3 to select an option, then press 4 or 6 to adjust. Press “#” to confirm the change or “\*” to cancel and exit.

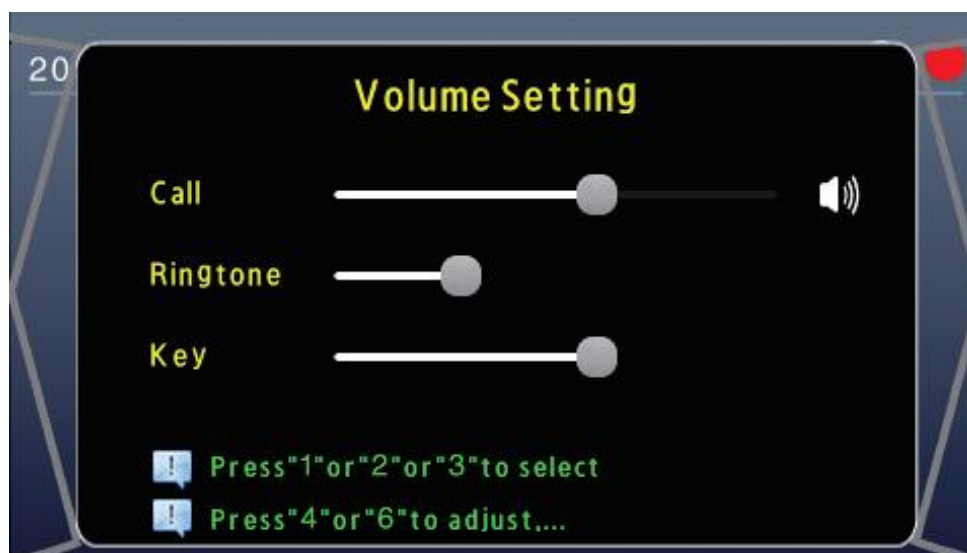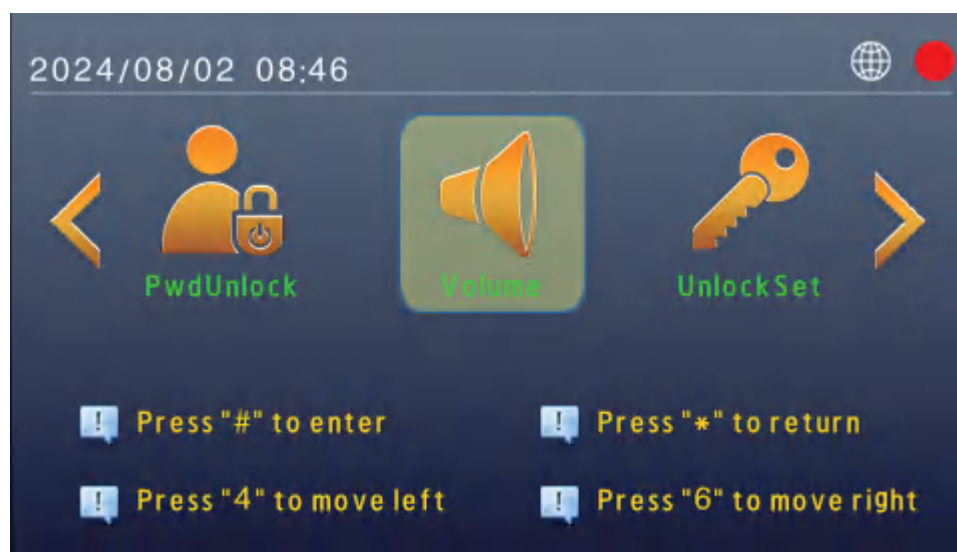

### (6)UnlockSet



Set the unlocking duration time (in seconds). The default duration is 1 second.

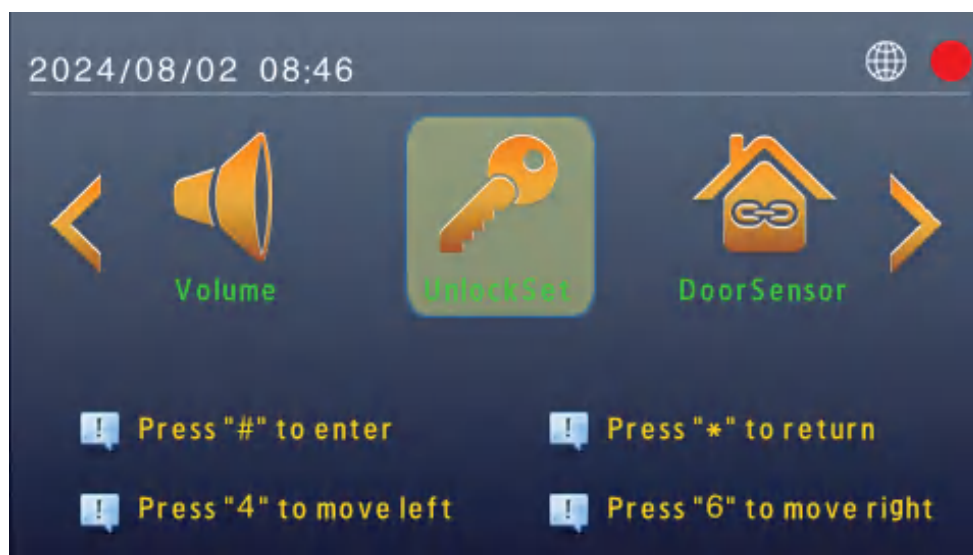

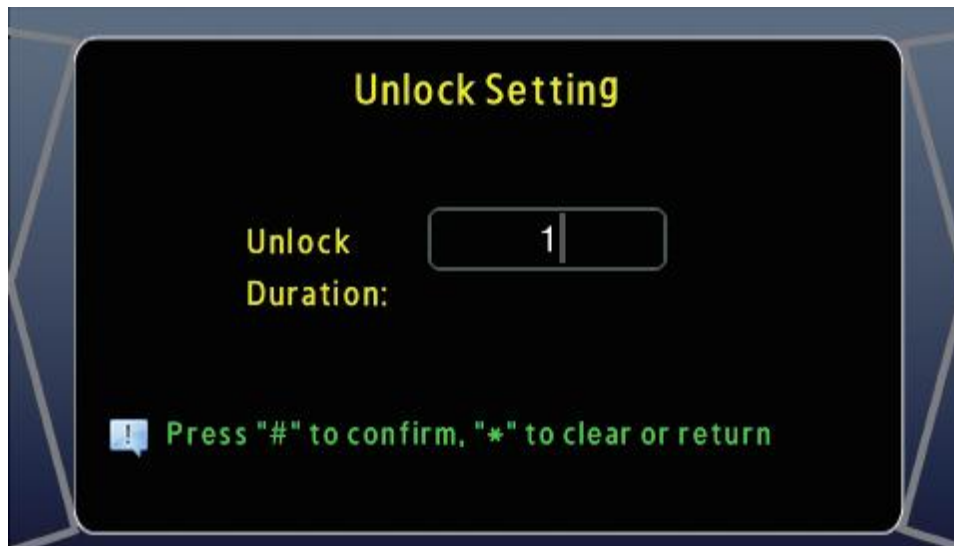


### (7)DoorSensor

Door sensor settings include enabling the sensor and setting the alarm delay time. The signal interface does not include a sensor.

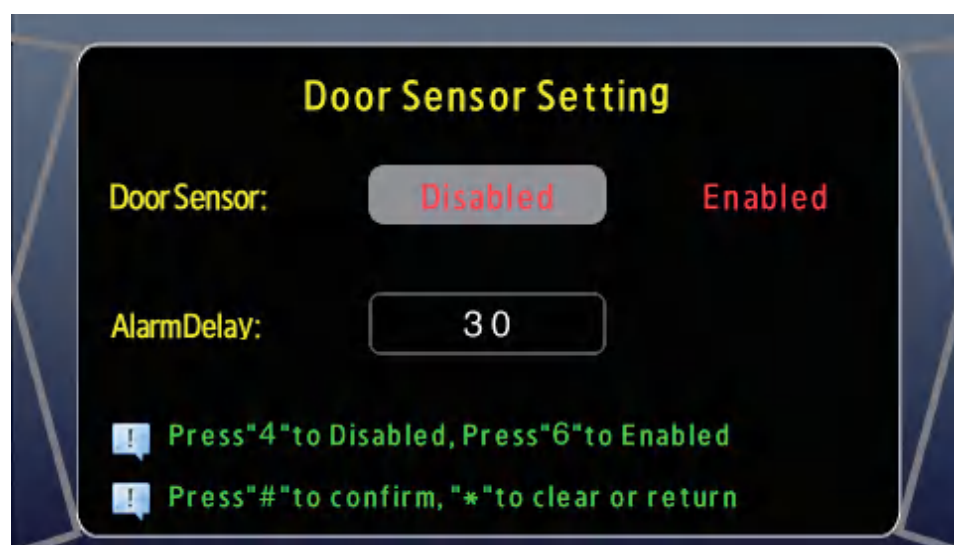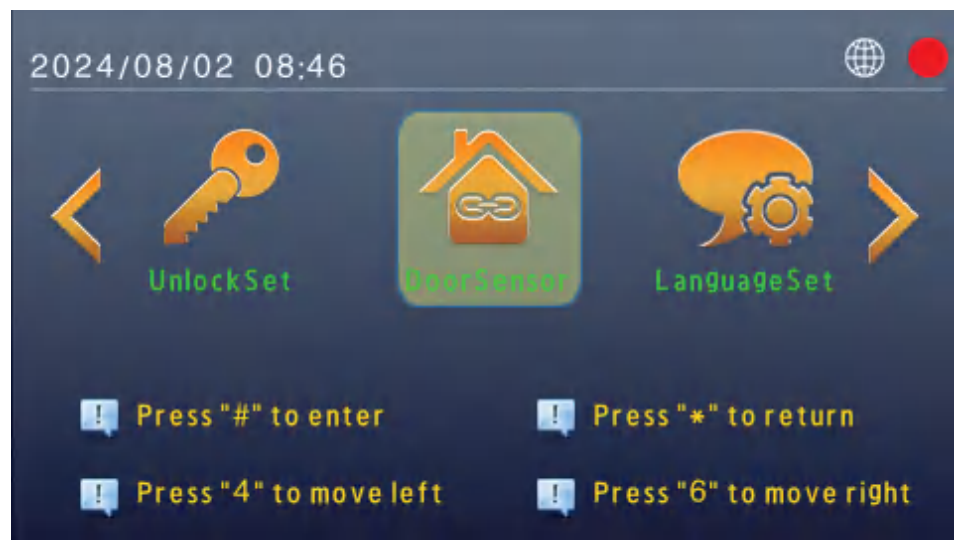


## (8)Language

The system offers two language settings. Available options include English, Turkish, Spanish, French, or a customized option.

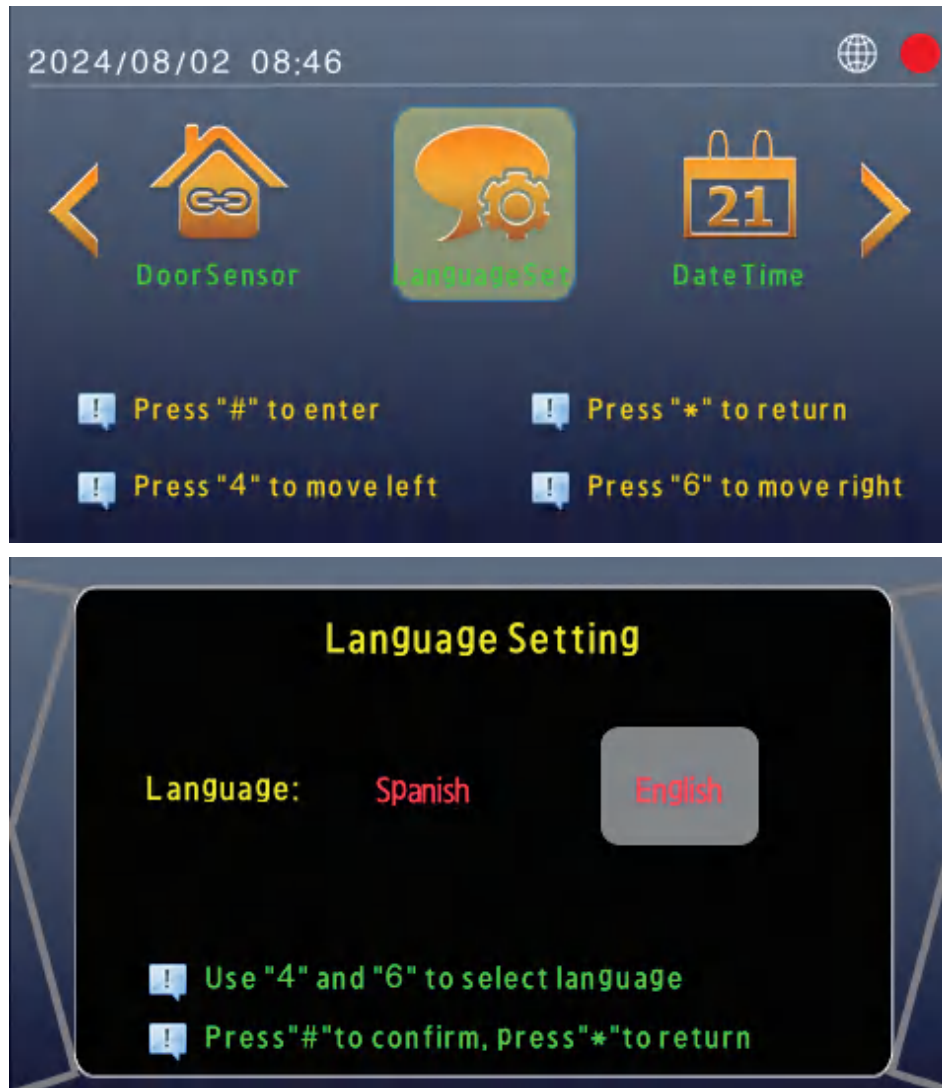

## (9)Date Time

Set the date and time.

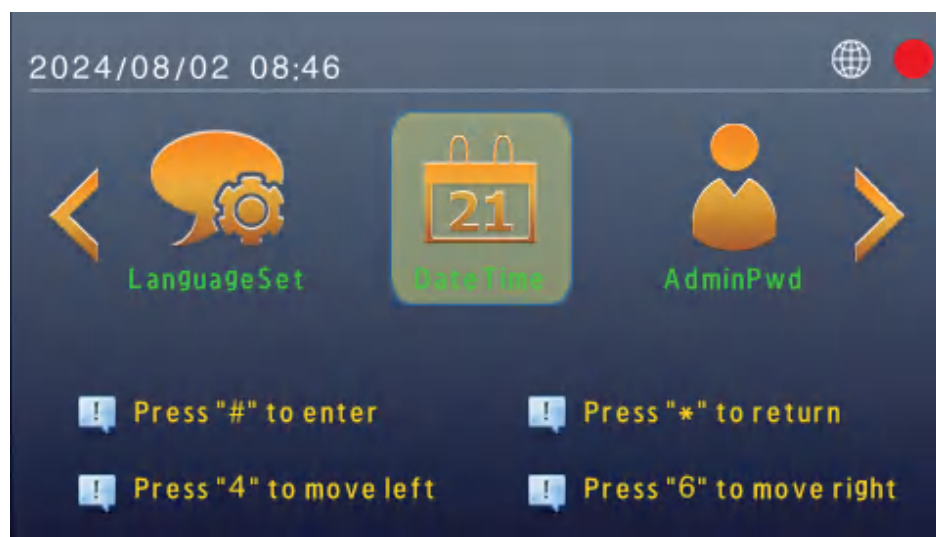

**Date and Time Setting**

Enter Date (YYYY-MM-DD):

-  -



Enter Time (HH-MM-SS):






:  :

! Press "#" to confirm, "\*" to clear or return

(10AdminPwd

Change the system password. The default password is "666666."

2024/08/02 08:46  

DateTime AdminPwd CardSet

! Press "#" to enter      ! Press "\*" to return

! Press "4" to move left      ! Press "6" to move right

**Admin Password**

Current Pwd:



New Pwd:

Confirm:

! Press "#" to confirm, "\*" to clear or return


## (11)Card Settings

Add, delete, and synchronize card information with the PC management center.

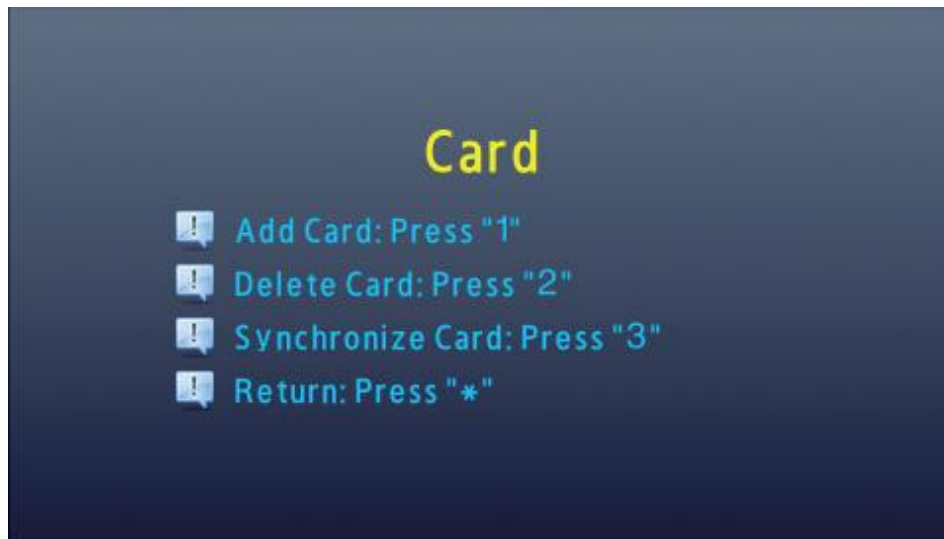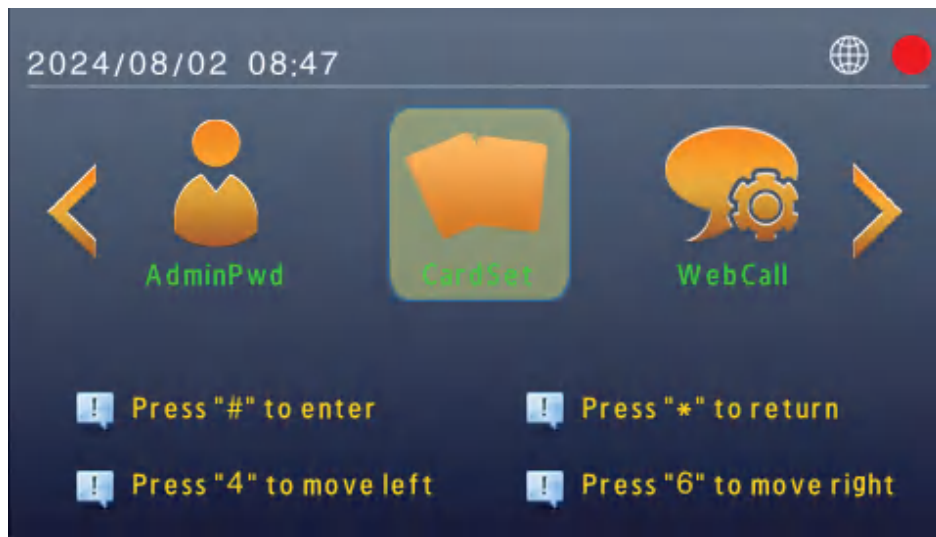

I. Press “1” to add cards. Input the 4-digit room number and press “#” to confirm. Then start adding cards. After swiping cards, press “\*” to exit and test the card.



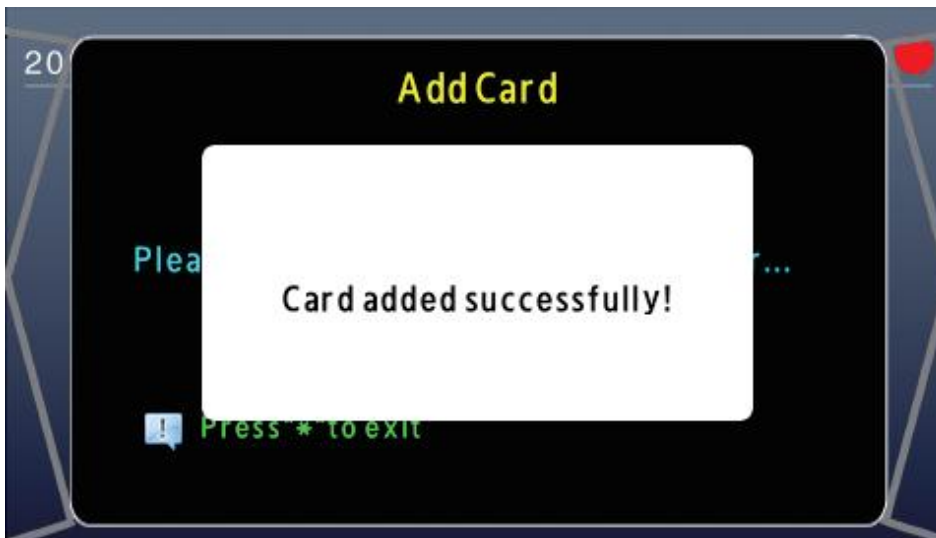


II. Press "2" to delete cards.



- ① Press "1" to delete a card by card number. Input the card number or swipe the card, then press "#" to confirm and delete.



- ② Press “2” to delete by room number. Enter the 4-digit room number of the cards you want to delete, then press “#” to confirm. Proceed to the second confirmation: press “#” to confirm, or “\*” to cancel and exit.

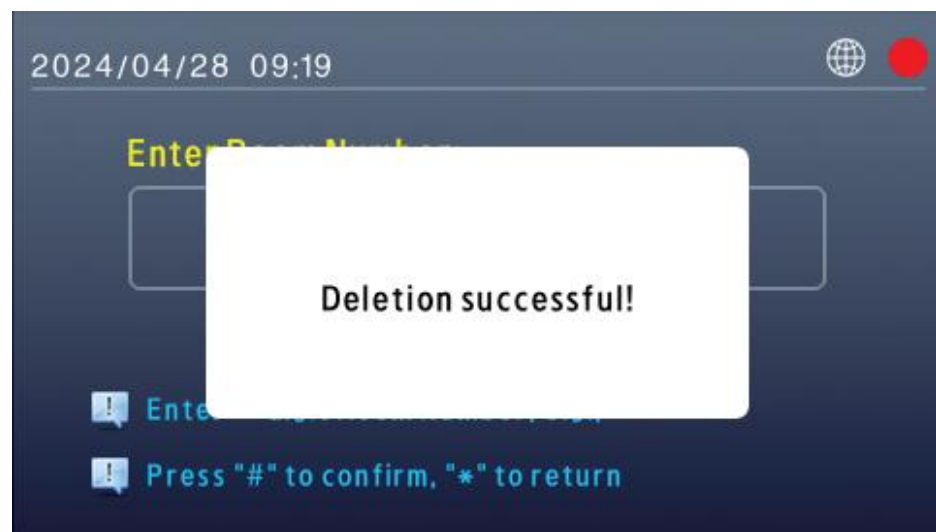


- ③ Press “3” to delete all card information. Then proceed to the confirmation page: press “#” to confirm, or “\*” to cancel and exit.



III.Press “3” to synchronize card information with the PC management center.

#### (12)WebCall


The WebCall function is not supported overseas. Press “4” to disable it, and “6” to enable it.

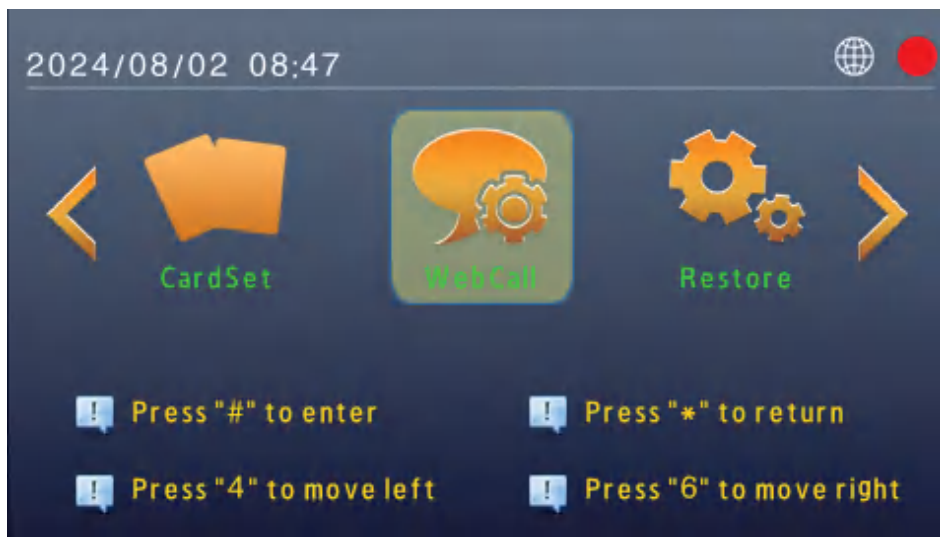





### (13)Restore

Reset to factory settings. Press “#” to confirm, and “\*” to cancel.

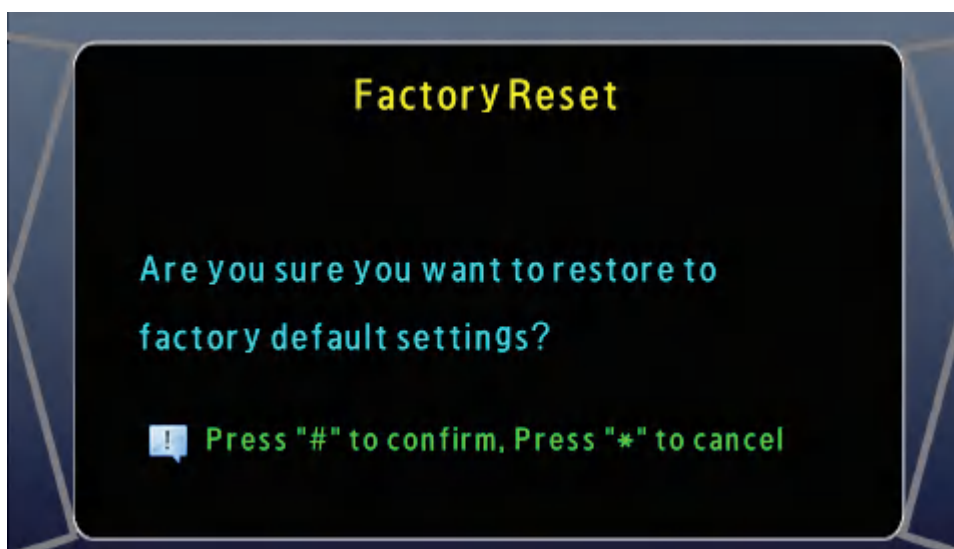


#### (14)DevTypeSet

Set device type: Press “0” to set as outdoor station, and “1” to set as lift device. Then press “#” to confirm the setting, while “\*” is to cancel and exit.

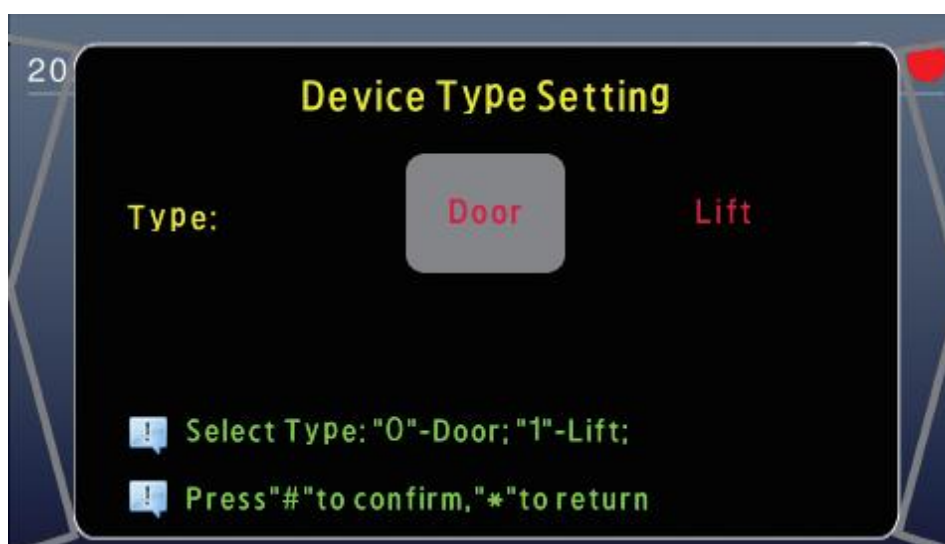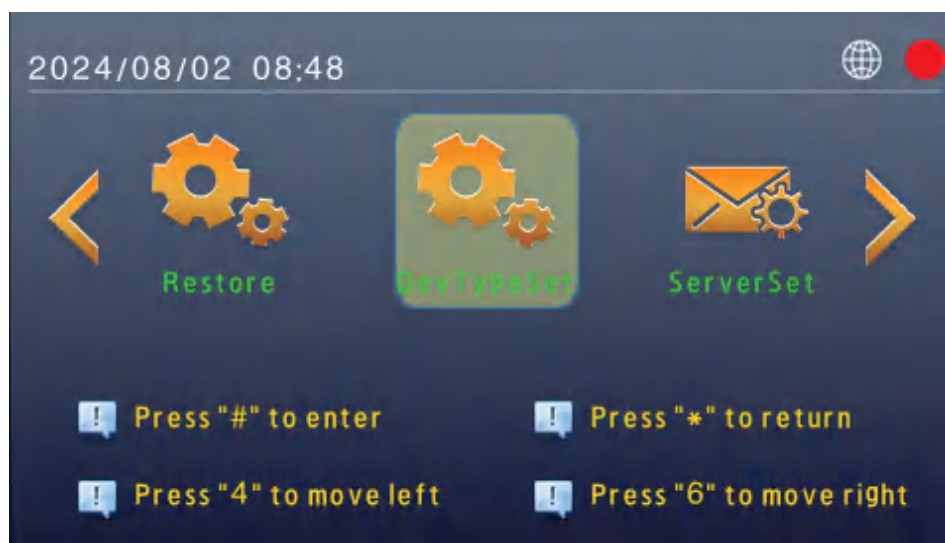

#### (15) Server Set


Set the WebCall server and port. Do not change the Server Address and Port.

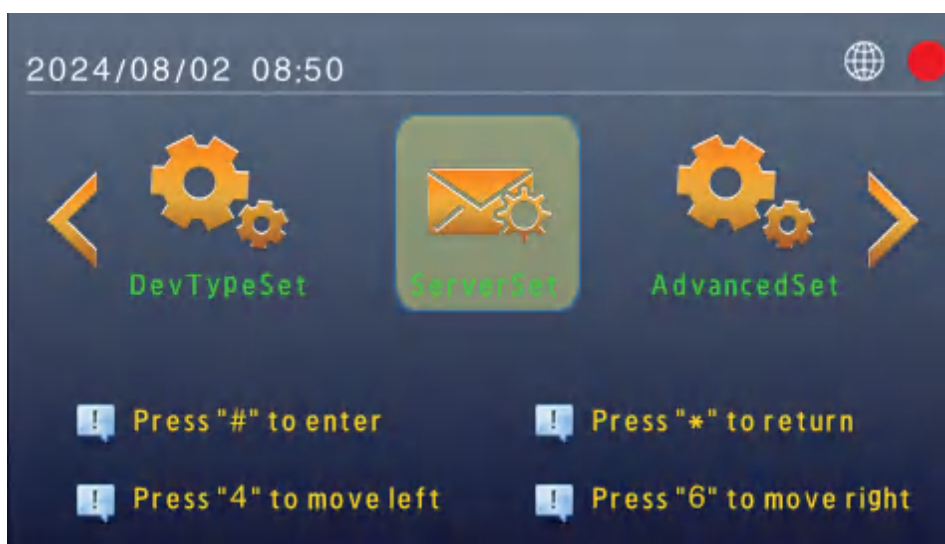



## (16)Advanced Set

Set ring duration, call time, and device floor. Ring duration is the ringing time for calling the resident. Call time is the length of time a resident can talk after answering the call. Device floor indicates the location of the device: 0-5, where 0 is the ground floor and 5 is the 5th floor underground.

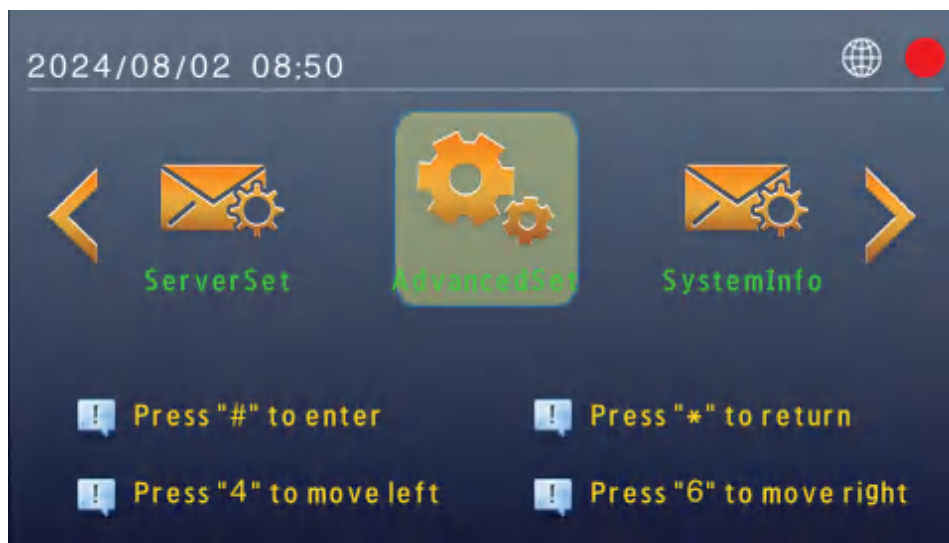

# Specifications

---

## Outdoor Station

- Resolution: 1080P 2MP, 1 Camera
- Display: 4.3" TFT LCD
- Wide View Angle: 130°
- Connection Quantity: Up to 9999 Indoor Monitors
- Resolution: 480\*272 Pixels
- Material: Aluminum Alloy Shell + Touch/Press Buttons
- Network Transmission Mode: TCP/IP Protocol
- Connection: CAT5 / CAT6 / 2 Wires
- Ethernet Interface: RJ45
- Power Supply: Non-standard POE Switch / Power Supply
- IC Card Capacity: Unlimited
- Operation Current: ≤500mA
- Operation Voltage: DC 12-15V
- Operation Temperature: -40°C ~ +70°C
- Outline Dimensions: 360\*140\*50mm
- Installation Dimensions: 350\*130\*50mm
- Installation: Wall-mounted or Embedded

| NO | Malfunction  | Reasons  | Solutions   |
|----|--|--|---|
| 1  | Why can't the outdoor station call the indoor monitor? | <ol style="list-style-type: none"> <li>1. Network Connection Issues: The network cable is not properly connected or is of poor quality.</li> <li>2. Insufficient Power Supply: The outdoor station may have unstable power or a faulty adapter.</li> <li>3. Configuration Errors: Room number or extension number settings may be incorrect.</li> <li>4. Device Malfunction: There could be physical damage to the outdoor station or indoor monitor.</li> </ol> | <ol style="list-style-type: none"> <li>1. Check the network connection to ensure the cable is securely connected and use high-quality CAT5 or CAT6 cables.</li> <li>2. Confirm that the outdoor station has a stable power supply, using the appropriate voltage (DC 12-15V).</li> <li>3. Verify that the room number and extension number settings are correct and unique.</li> <li>4. Inspect the devices for physical damage and contact technical support if necessary.</li> </ol>  |
| 2  | Why can't the lock be opened?                          | <ol style="list-style-type: none"> <li>1. Power Supply Issues: The lock may not be receiving power.</li> <li>2. Wiring Problems: Incorrect wiring or loose connections may prevent the lock from functioning.</li> <li>3. Incorrect Password: The entered password may be wrong.</li> <li>4. Mechanical Jam: The lock mechanism might be jammed or malfunctioning.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Ensure the lock is connected to a reliable power supply and check the power adapter.</li> <li>2. Review the wiring connections according to the installation diagram to ensure they are correct.</li> <li>3. Verify the password and try entering it again.</li> <li>4. Inspect the lock for any physical obstructions or damage and lubricate if necessary. If the problem persists, consider replacing the lock.</li> </ol>   |
| 3  | Why can't the indoor monitor connect to the Tuya app?  | <ol style="list-style-type: none"> <li>1. Poor Internet Connection: The Wi-Fi signal may be weak or unstable.</li> <li>2. Incorrect Wi-Fi Settings: The monitor may not be connected to the correct Wi-Fi network.</li> <li>3. App Compatibility: The Tuya app may not be updated or compatible with the monitor.</li> <li>4. Incorrect QR Code Scan: The QR code might not have been scanned correctly during the setup.</li> </ol>                             | <ol style="list-style-type: none"> <li>1. Check the Wi-Fi connection and ensure it is stable. Try reconnecting the monitor to the network.</li> <li>2. Verify that the monitor is connected to the correct Wi-Fi network and re-enter the password if needed.</li> <li>3. Update the Tuya app to the latest version and ensure it is compatible with the monitor.</li> <li>4. Re-scan the QR code in the app, making sure to follow the instructions carefully. If issues persist, restart both the monitor and the app.</li> </ol> |