 


# User Manual

## Analog Indoor Monitor

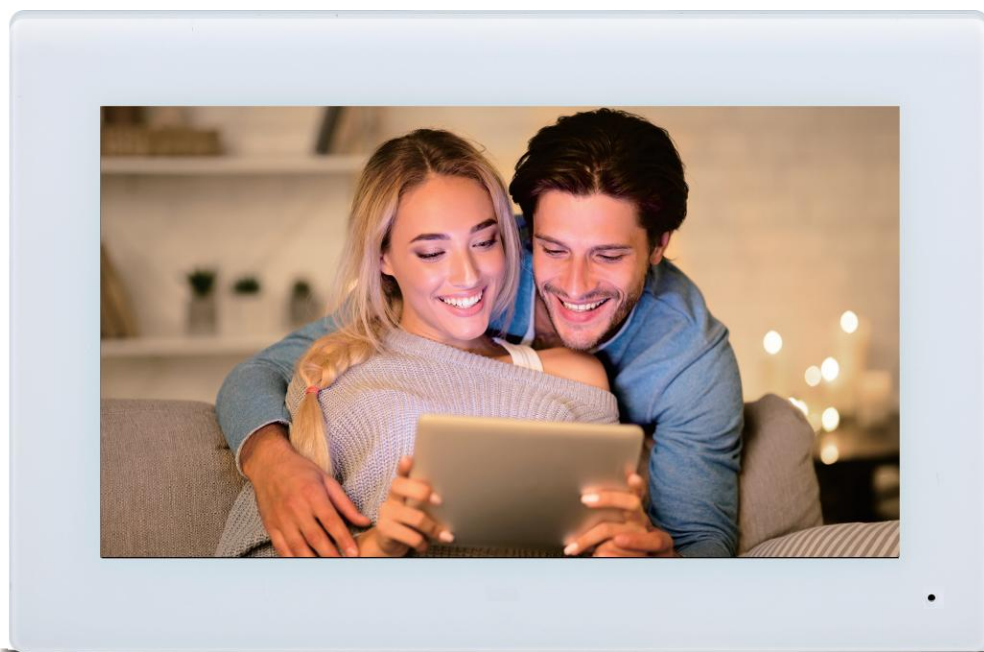 


7 Inches

Before using this product, read the Quick Guide carefully and save it for future referenceV3.0.

# Front and Back Introduction

## LNK-M72T

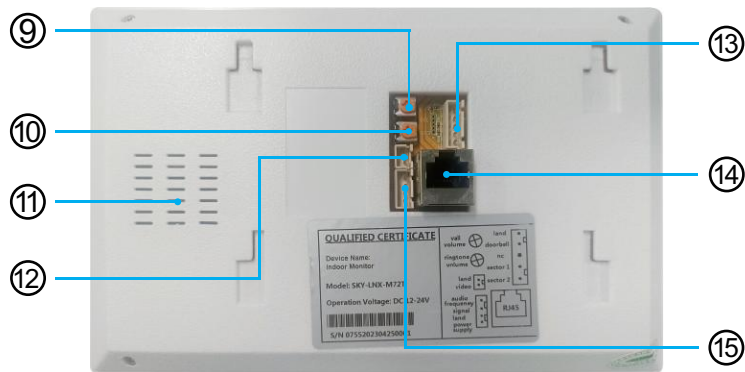

① Call Guard

② Monitor

③ Msg/Rec

④ Call Lift

⑤ SOS

⑥ Automation

⑦ Alarm

⑧ Setting

⑨ Call Volume

⑩ Ringtone Volume

⑪ Bracket Slot


⑫ Land Video

⑬ Land Doorbell NC Sector1 Sector2

⑭ RJ45


⑮ Audio Signal Land Power

# Indoor Monitor Installation

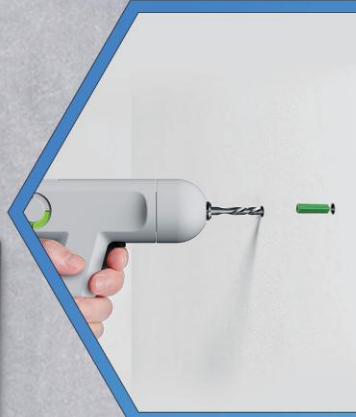 

## Drilling

 Drill screw holes at proper location for wall mounting plate.

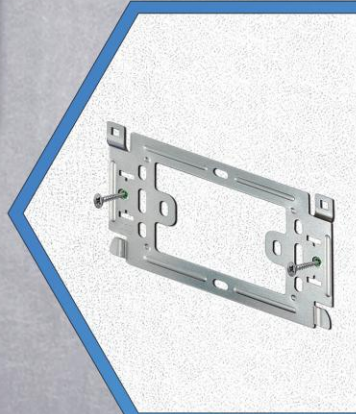

## Fix wall mounting plate

 
Fix the wall mounting plate to the wall with 2 screws.



## Hook indoor monitor

Hang the indoor monitor on the wall mounting plate tightly.


# Wiring Diagram(1 to 1) (Ethernet Cable)

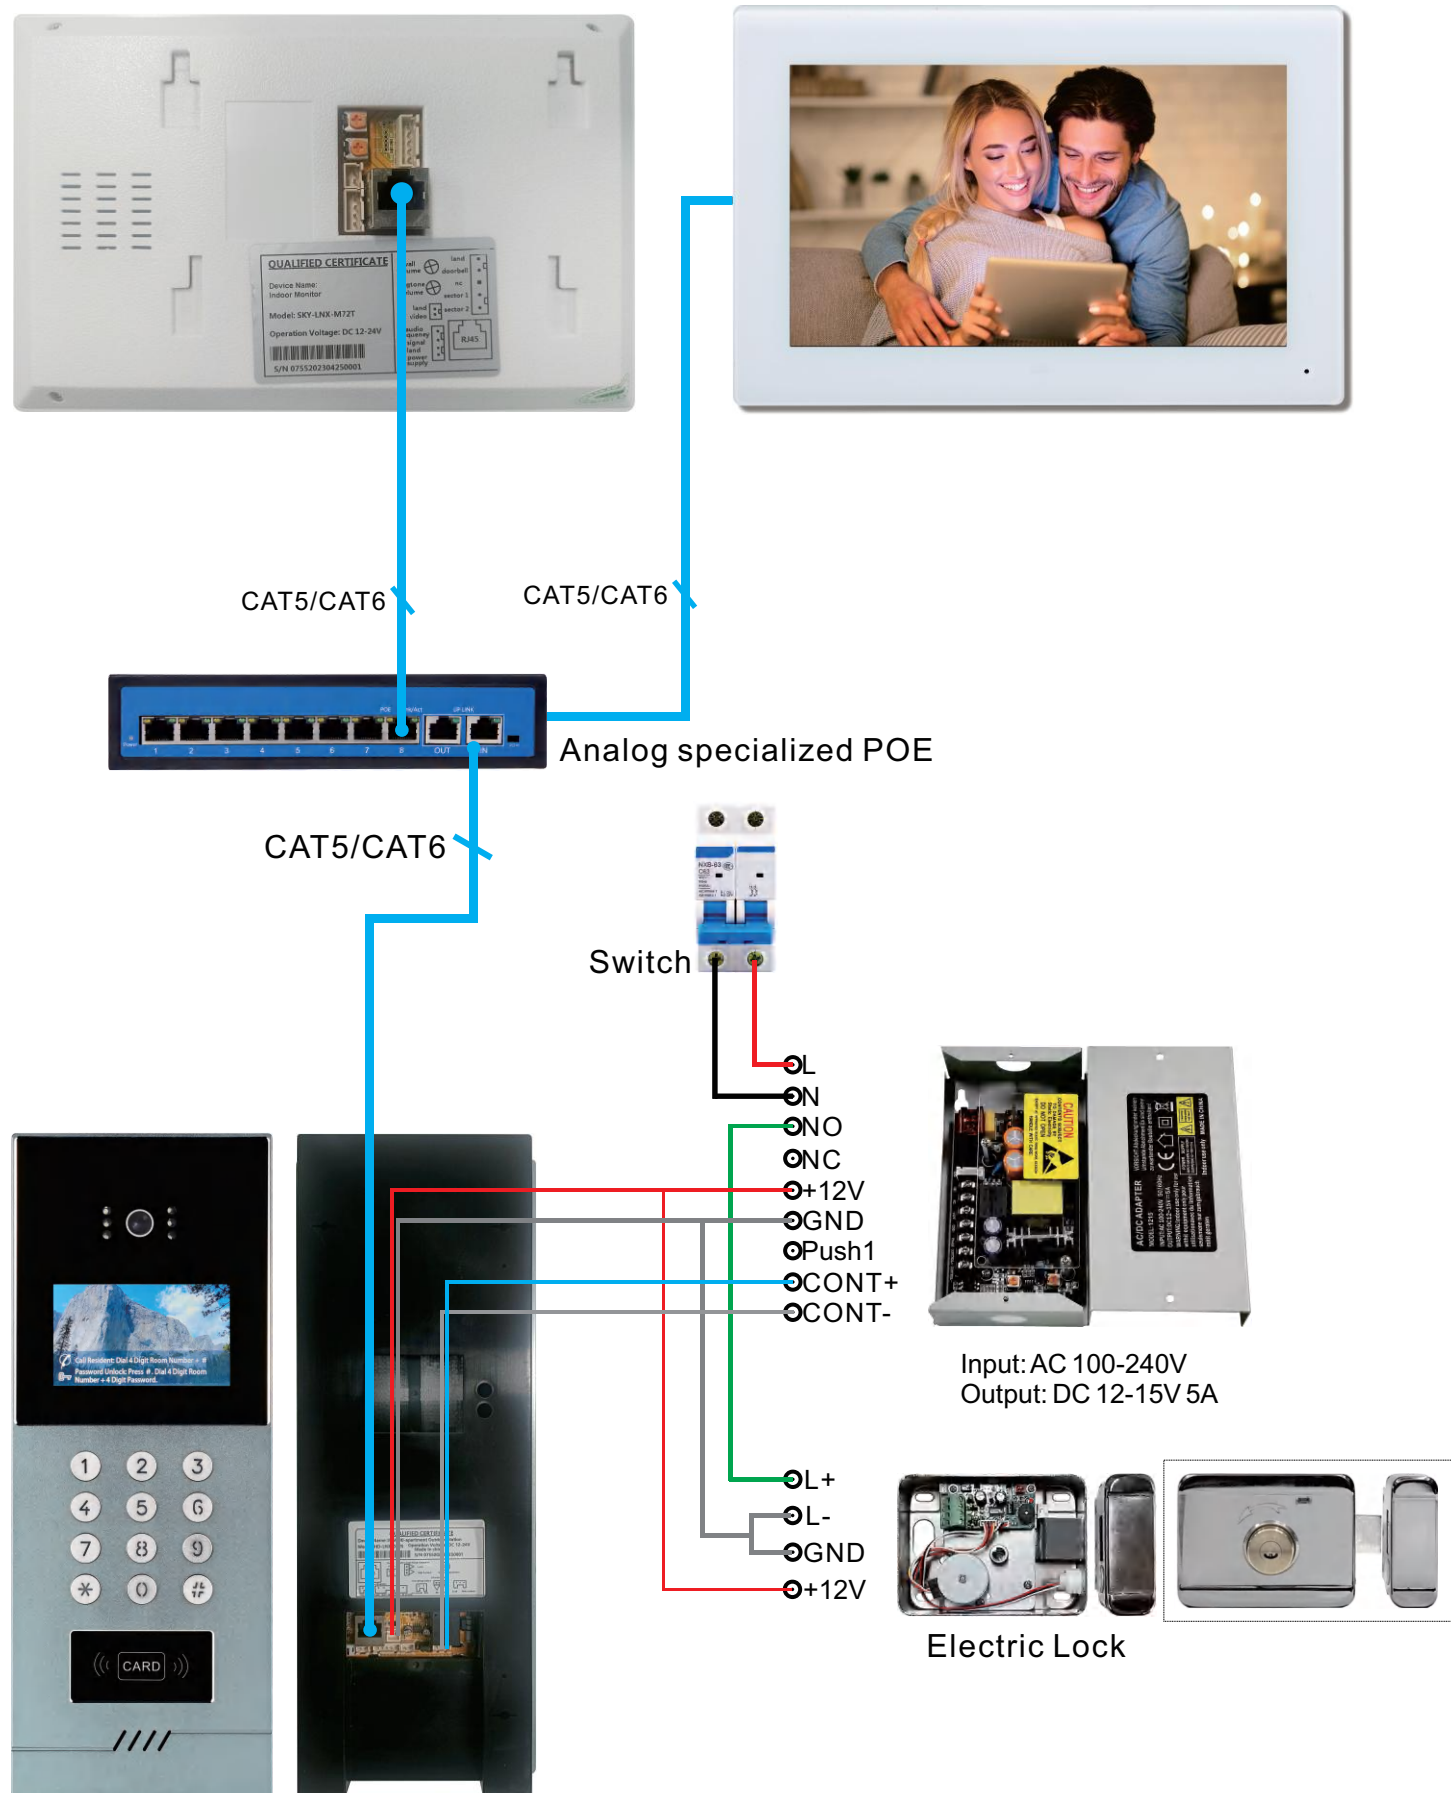



# Local LAN Networking Diagram (1 ~ 9999 Monitors)

 Room number can be set 1 digit, 2 digit, 3 digit or 4 digit

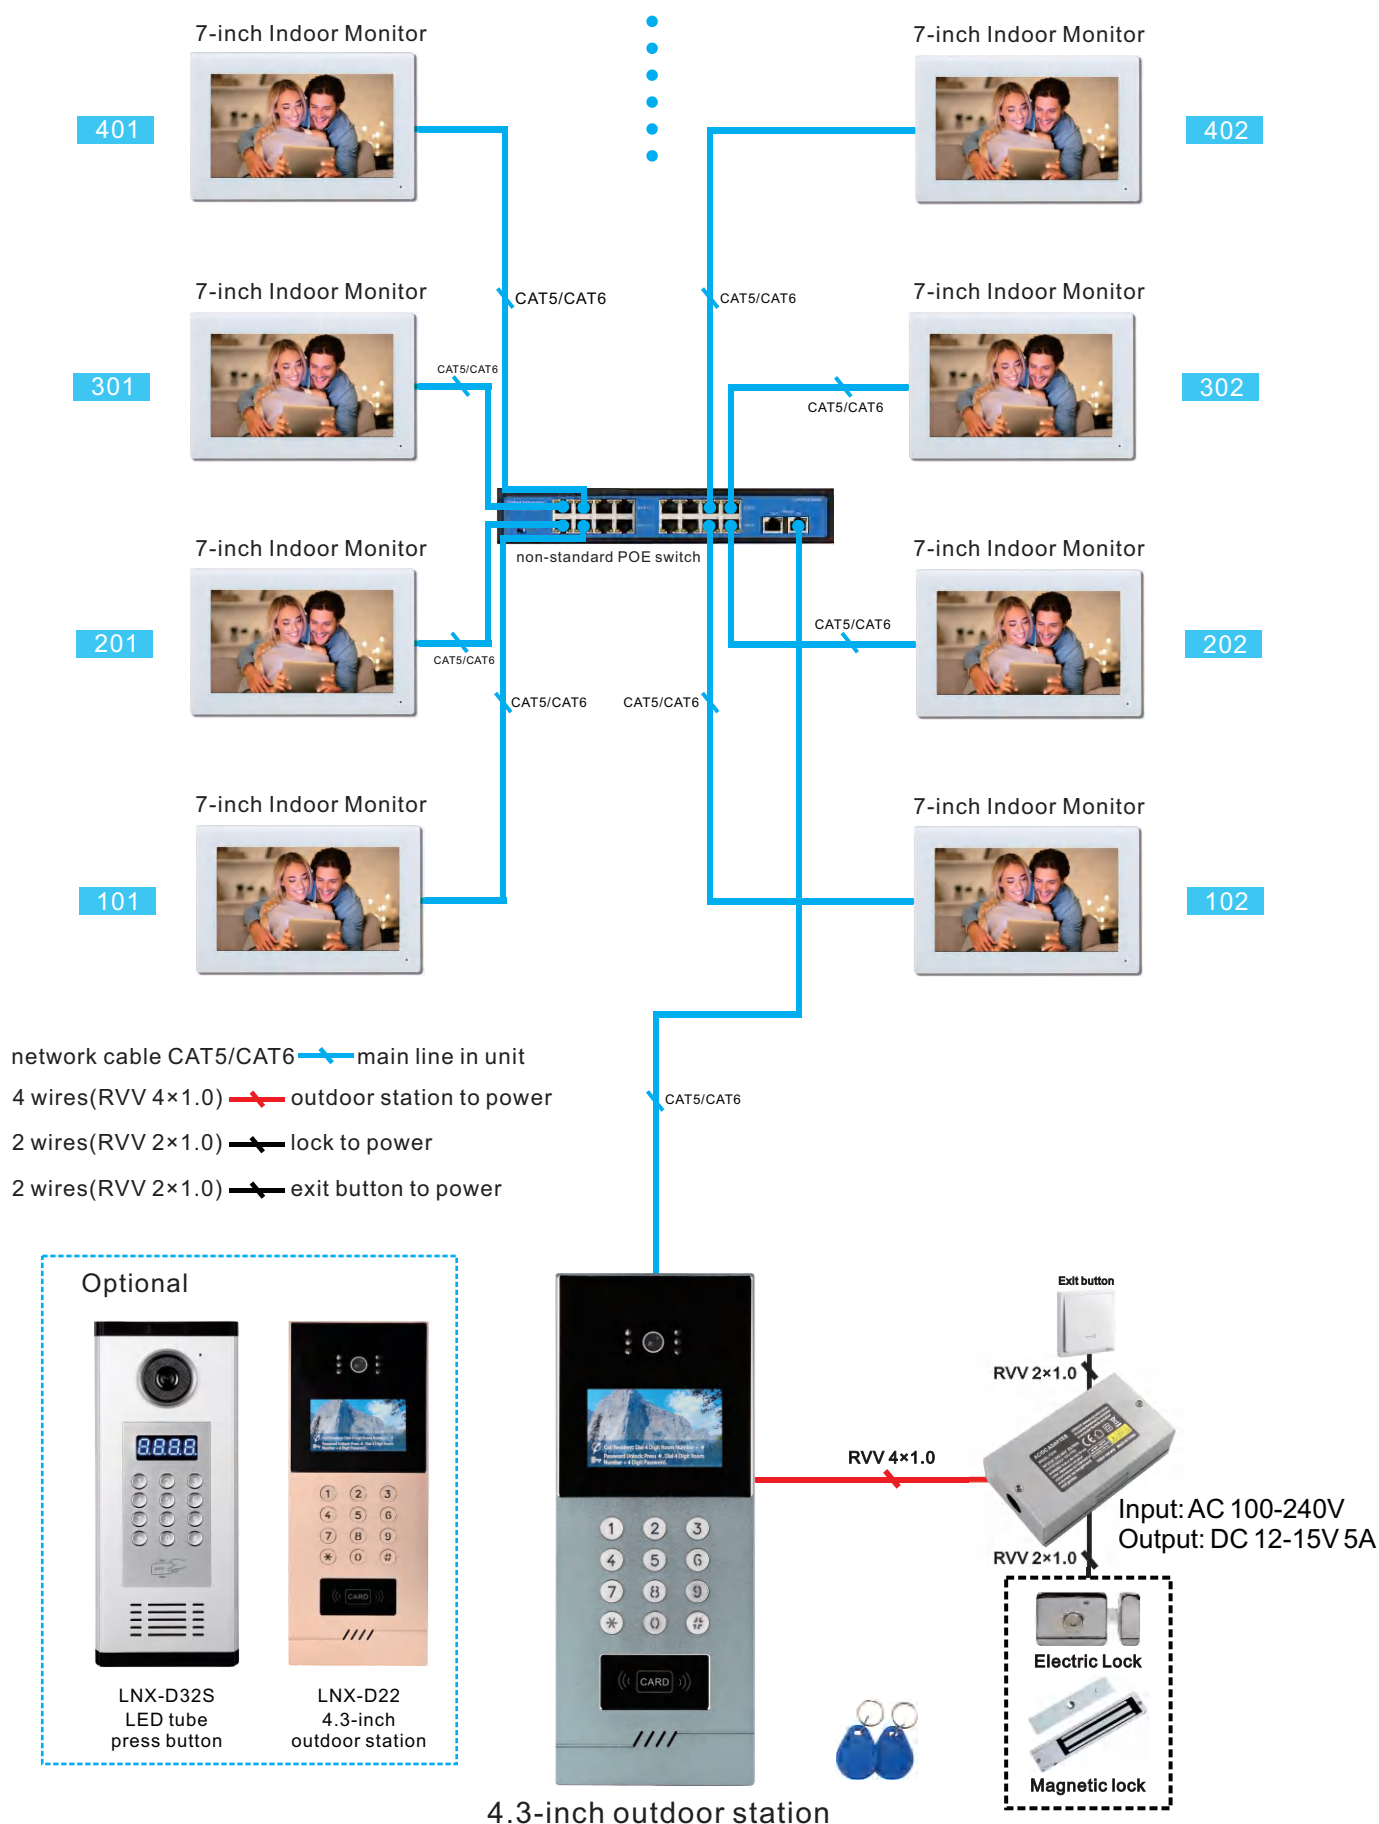


# Features

---

1. 7" TFT color capacitive full touch screen.
2. Monitoring the outdoor station environment by picture and video.
3. Video call, two-way talk & intercom with outdoor station, call management center and guard station.
4. Remotely open the door with unlock button.
5. Security alarm, can be connected to two defense areas (SOS/Gas).
6. Support 9999 indoor monitors.
7. RJ45 Ethernet cable connection.
8. Call lift (requires an elevator control system).
9. Powered by POE switch.
10. Menu touchscreen: Monitor/ Call guard/ SOS/ Automation/ Message/ Photo record/ Call lift/ Setting/ Alarm.
 
## 7 Inch Full Touchscreen Analog Indoor Monitor Interface

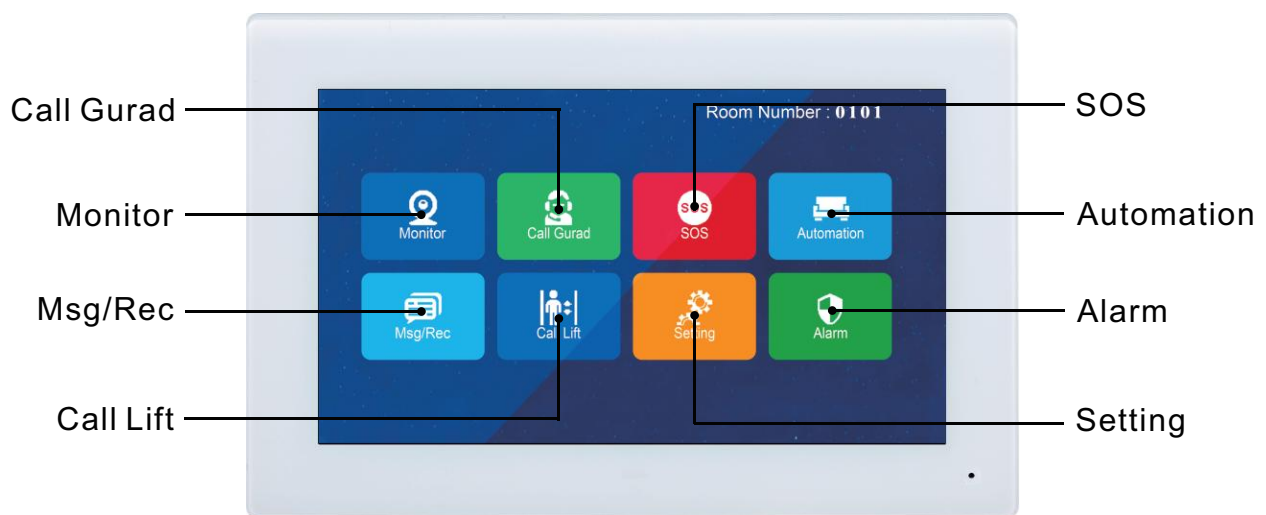


# Instructions

## Homepage


 
### 1. Answer the call

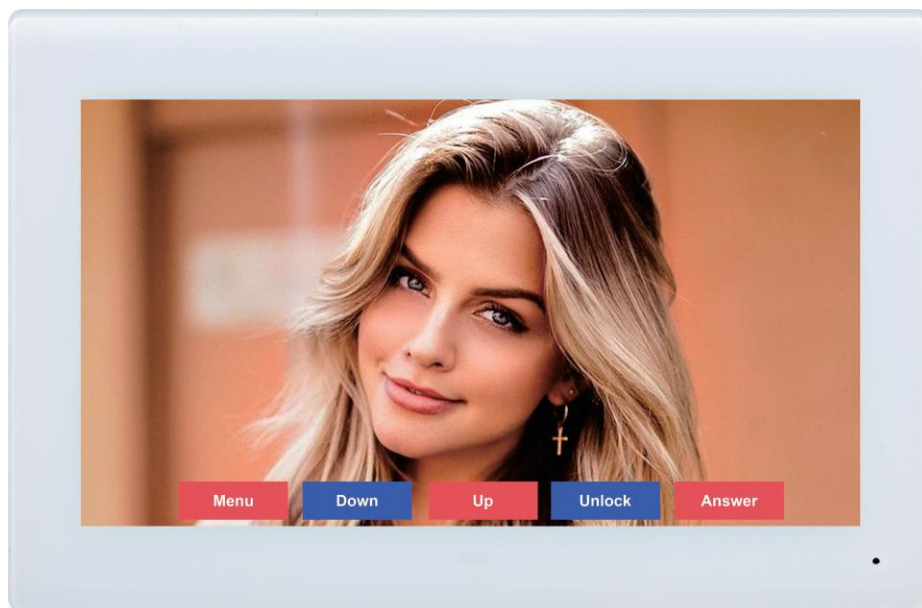

Press "Menu" to adjust brightness, chroma and contrast. Press "Answer" to talk with the visitor, and "Unlock" to open the door.

### 2. Monitor

To monitor the real-time image of outdoor station.

### 3. Call Guard

In IP-Analog system and a guard station is connected, call the guard station.

### 4. SOS

In IP-Analog system and PC management center is connected, When press SOS for 3s, the center will get the alarm.

## 5.Automation

Not supported.

## 6.Msg/Rec



Not supported.

## 7.Call lift

In IP-Analog system, when outdoor station has been linked with lift system, press to call lift.

## 8.Setting

Password is “123456”. After that, input 4-digit room number and confirm.

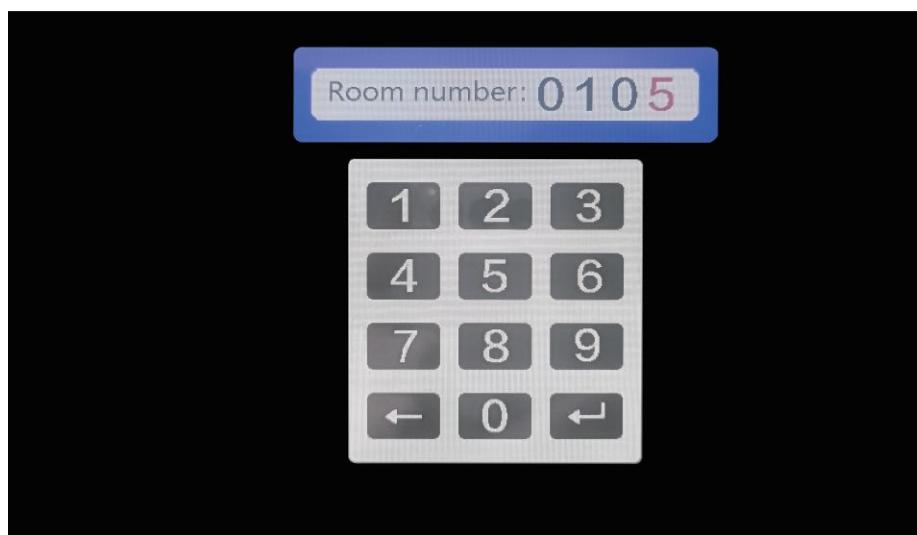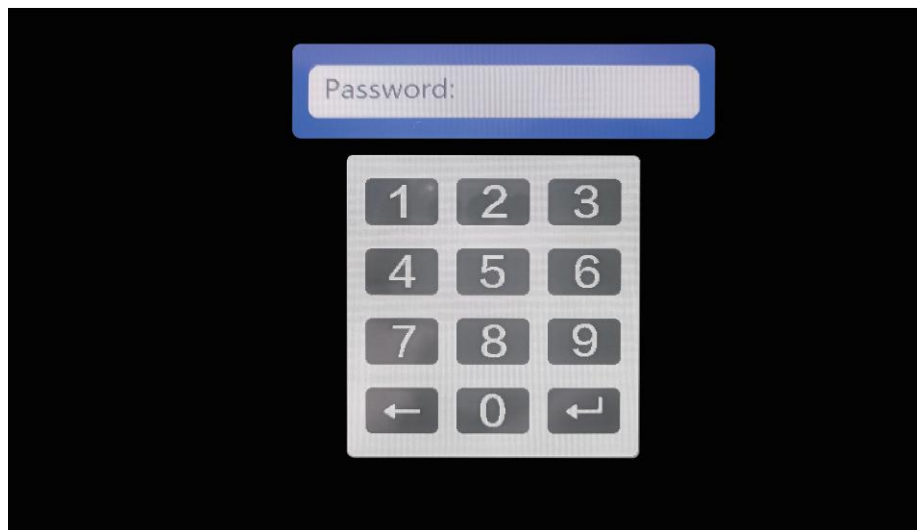

## 9.Alarm

2 detectors can be connected. When the detector is triggered, the indoor monitor will alarm. If the system is in IP-Analog and the PC management center is installed, the center will also get the alarm.



# Specifications

---

## Indoor Monitor

- Display: 7-inch Color Full Touch Screen
- Material: ABS Plastic + PET
- Resolution: 1024\*600 Pixels
- Working Voltage: DC 12-24V
- Working Current: Less Than 500mA
- Working Temperature: -10℃-50℃
- Dimension: 190\*122\*18 (mm)
- Installation: Wall-mounted

## FAQ

---

| NO | Problem   | Reason   | Solution  |
|----|---|--|---|
| 1  | The outdoor station can not call the indoor monitor.          | 1.Network cable problem.<br>2.Room number is not correct.                | 1.Check the network cable.<br>2.Set the room number.                |
| 2  | No voice.   | Speaker is broken.   | Contact after-sales service.  |
| 3  | The detector is triggered but the indoor unit does not alarm. | The connection between the detector and the indoor monitor is incorrect. | Check the connection and reconnect the detector and indoor monitor. |